

Service Manual

CB TRANSCEIVER

Model JACKSON

UT-547C/D

uniden®
CORPORATION

TABLE OF CONTENTS

- A. SPECIFICATIONS
- B. INSTALLATION
- C. GENERAL INFORMATION
- D. OPERATING CONTROLS
- E. ALIGNMENT PROCEDURES
- F. FREQUENCIES
- G. BLOCK DIAGRAM
- H. SCHEMATIC DIAGRAMS/WIRING DIAGRAM/PC BOARD
 - 1. E12-2108 : SCHEMATIC DIAGRAM
 - 2. E12-2108 : REVISED
 - 3. E22-4674 : MAIN PCB PARTS ASSEMBLY TOP VIEW
 - 4. E32-2212 : WIRING DIAGRAM
- I. BILL OF MATERIAL : 25 P.S

A. SPECIFICATIONS

1. GENERAL

Channel and Frequency Range	:	226 A Band 26.065 - 26.505 MHz B Band 26.515 - 26.955 MHz C Band 26.965 - 27.405 MHz D Band 27.415 - 27.855 MHz E Band 27.865 - 28.315 MHz
Crystals	:	3
Microphone	:	600 ohms, Dynamic Type
Speaker	:	8 ohms, 3 W
Antenna Connector	:	M Type
Jacks & Connectors	:	Mic 4P EXT. SP -3.5Ø PA. SP -3.5Ø DC Power -3P
Controls	:	Channel Selector, Mode Selector FM-AM-USB-LSB, Mic Gain, ON/OFF Power Switch & Volume, ON/OFF PA Switch & Squelch, RF Gain, Coarse, Fine, Band Selector A-B-C-D-E, Noise Blanker/ ANL Switch, Roger Beep Switch, S/RF-Mod Switch and +10 kHz - Normal Switch
Meter	:	RF Output Power, Signal Strength and Modulation
Illumination	:	Channel Number Indication (LED) RX, TX Indication (LED), Meter Lamp
Size	:	7.784"(W) X 2.36"(H) X 11.22"(D)
Weight	:	5 Pounds (2.2 kgs)
Accessories	:	DC Power Cable with Built-in Fuse, Microphone and Microphone Hanger

2. MEASUREMENT CONDITIONS

a) Power Source	:	13.8 V (DC)
b) Antenna Impedance	:	50 ohms
c) Test Temperature	:	25 ½C
d) AM Modulation Frequency	:	1 kHz
e) FM Modulation Frequency	:	1 kHz
f) SSB Modulation Frequency, Two Tone	:	500 Hz \$ 2.400 Hz
g) Mean Signal Input Level	:	1.000 uV
h) Reference AM Modulation Percentage	:	1 kHz 30%

- i) Reference FM Deviation : 1.5 kHz
 j) Reference Audio Output Power : 0.5 W
 k) Audio Frequency : 1 kHz
 l) Audio Output Load : 8 ohms Resistive

3. TRANSMITTER

	<u>UNIT</u>	<u>NOMINAL</u>	<u>LIMIT</u>
a) Frequency Tolerance at 25 % (5 Minutes after Switch on)	AM Hz	± 300	± 1.500
	SSB Hz	± 300	± 1.500
	FM Hz	± 300	± 1.500
b) Carrier Power	AM W	10.0	8.0 - 14.0
	FM W	10.0	8.0 - 14.0
c) PEP Power, Two Tone, SSB	Wpep	21.0	18.0 - 26.0
d) Spurious & Harmonic Emission	AM dB	-50	-40
	SSB dB	-50	-40
	FM dB	-50	-40
e) Carrier Suppression	SSB dB	-55	-40
f) Unwanted Sideband Suppression (at 2.500 Hz 4 Wpep 16 dB Single tone)	SSB dB	-50	-40
g) Battery Drain at no Modulation	AM mA	3.000	4.500
	SSB mA	800	1.500
	FM mA	3.000	4.500
h) Battery Drain AM : MAX Modulation SSB: MAX Wpep, Two Tone FM : MAX Modulation	mA	3.000	4.500
	mA	3.000	4.500
	mA	3.000	4.500
i) Modulation Frequency Response (1 kHz, 0dB reference) Lower at 450 Hz	AM dB	-4	-10
	SSB dB	-4	-10
	FM dB	-4	-10
Lower at 2.5 kHz	AM dB	-4	-10
	SSB dB	-4	-10
	FM dB	-4	-10
j) Microphone Sensitivity AM : For 50% Modulation SSB: For 10 Wpep Output FM : For 1 kHz Deviation	mV	1.0	2.0
	mV	1.0	2.0
	mV	1.0	2.0
k) AMC Range AM : 50 - 100% Modulation SSB:	dB	50	40
	dB	50	40

4. RECEIVER (ANL/NB Switch off)	UNIT	NOMINAL	LIMIT
a) Max Sensitivity	AM uV	0.5	2.0
	SSB uV	0.25	1.0
b) Sensitivity for 10dB S/N	AM uV	0.5	2.0
	SSB uV	0.25	1.0
FM : 20dB S/N	FM uV	0.5	3.0
c) AGC Figure of Merit, 50 mV for 10dB change in Audio Output	AM dB	80	70
	SSB dB	80	70
d) Overall Audio Fidelity at 6dB down			
Upper Frequency	AM Hz	2.000	1.500 - 3.000
	SSB Hz	3.000	2.000 - 4.500
	FM Hz	2.500	1.500 - 4.000
Lower Frequency	AM Hz	300	100 - 500
	SSB Hz	300	100 - 500
	FM Hz	300	100 - 500
e) Adjacent Channel Selectivity (10 kHz 1 GEN)	AM dB	70	60
f) Maximum Audio Output Power	AM W	4.0	3.0
	SSB W	4.0	3.0
	FM W	4.0	3.0
g) Audio Output Power at 10% THD	AM W	2.5	2.0
	SSB W	2.5	2.0
	FM W	2.5	2.0
h) RF Gain Control Range	AM dB	55	30 - 70
	SSB dB	55	30 - 70
	FM dB	55	30 - 70
i) S/N Ratio at 1mV Input	AM dB	30	25
	FM dB	35	25
j) Squelch Sensitivity at Threshold	AM uV	0.5	2.0
	SSB uV	0.5	2.0
	FM uV	0.5	2.0
k) Squelch Sensitivity at Tight	AM uV	1.000	250 - 4.000
	SSB uV	1.000	250 - 4.000
	FM uV	1.000	250 - 4.000
l) S Meter Sensitivity at "S-9" (No Modulation)	AM uV	100	25 - 400
	SSB uV	100	25 - 400
	FM uV	100	25 - 400
m) Image Rejection Ratio	AM dB	65	50
	SSB dB	65	50
	FM dB	65	50
n) IF Rejection Ratio	AM dB	85	70
	SSB dB	85	70
	FM dB	85	70
o) Oscillator Dropout Voltage	AM V	9	11
	SSB V	9	11
	FM V	9	11

	<u>UNIT</u>	<u>NOMINAL</u>	<u>LIMIT</u>
p) Battery Drain at No Signal	AM mA	500	800
	SSB mA	500	800
	FM mA	500	800
q) Battery Drain at Max. Audio Output	AM mA	1.000	1.500
	SSB mA	1.000	1.500
	FM mA	1.000	1.500
r) Clarifier Range	AM kHz	\pm 7.0	More than \pm 5.0
	SSB kHz	\pm 7.0	More than \pm 5.0
	FM kHz	\pm 7.0	More than \pm 5.0

5. PUBLIC ADDRESS

a) Output Power at 10% Distortion	W	2.5	2
--------------------------------------	---	-----	---

)
NOTE :

- 1) Shall have reverse polarity protection and operable with positive or negative grounding
 - 2) Operating Power Voltage : 13.8V + 15 - 20% DC
-)

B. INSTALLATION

1. LOCATION

Plan the location of the transceiver and microphone bracket before starting the installation. Select a location that is convenient for operation and does not interfere with the driver or passenger in the vehicle. In automobiles, the transceiver is usually mounted to the dash panel with the microphone bracket beside it.

2. MOUNTING AND CONNECTION

This radio is supplied with a universal mounting bracket. The transceiver is held in the bracket by the four thumb screws supplied, permitting adjustment to the most convenient angle. The bracket must be mounted with the screws supplied. The mounting surface must be mechanically strong. Proceed as follows to mount the transceiver :

- a) After you have determined the most convenient location in your vehicle, hold the radio with the mounting bracket in the exact location desired. If nothing interferes with mounting it in the desired position, remove the mounting bracket thumb screws and mark the mounting holes using the bracket as a template. Before drilling the holes, make sure nothing will interfere with the installation of the mounting screws. Drill the holes and mount the bracket and then install the radio.
- b) Connect the antenna cable plug to the standard receptacle on the rear panel. Most CB antennas are terminated with a type PL-259 plug which mates with the receptacle on the rear panel.
- c) Connect the DC power input wire with the fuse (red) to +12V DC. This wire extends from a plug which connects to the rear panel. In automobile installations, +12V DC is usually obtained from the accessory contact on the ignition switch. This prevents the set being left on accidentally when the driver leaves the car and also permits operating the radio without the engine running. You can locate the

accessory contact on most ignition switches by tracing the power wire from the AM broadcast receiver in the car.

- d) Connect the black wire to ground. This is usually the chassis of the car. Any convenient location with good electrical contact may be used. (remove paint).

Note : See ground connection under GENERAL INFORMATION for more detail.

- e) Mount the microphone hanger on the side of the unit or near the unit, using the screws supplied.

)

)

C. GENERAL INFORMATION

1. GROUND CONNECTION

This radio may be installed and used in any 12V DC negative or positive ground system vehicle.

- a) Negative ground system : Connect the Red power lead from the radio to the positive or (+) battery terminal or other convenient point, and connect the Black power lead to the chassis or vehicle frame or (-) battery terminal.
- b) Positive ground system : In the cases of positive ground system, connect the Black power lead from the radio to the negative or (-) battery terminal or other convenient point, and connect the Red power lead to the chassis or vehicle frame or (+) battery terminal.

2. ANTENNA

This radio is designed to operate into a 50 ohm CITIZENS RADIO antenna. Best result will be obtained from your transceiver if you use good antenna and properly install your antenna. (Refer to the antenna installation instructions included with your antenna.)

A vertically polarized quarter-wavelength whip antenna provides the most reliable operation and greater range. The shorter loaded-type whip antennas are more attractive, compact and adequate for applications where the maximum possible distance is not required. Also, the loaded whip antennas do not present the problems of height imposed by the full quarter-wavelength whip.

When installed in a boat, the transceiver will operate most efficiently when the antenna used has been especially designed for marine applications.

Mobile whip antennas utilize the metal body of the vehicle as a ground plane. When mounted on a corner of the vehicle, they are slightly directional, in the direction of the body of the vehicle. For all practical purposes, however, the radiation pattern is non-directional. A slight directional characteristic will be observed only at extreme distances. A standard antenna connector (Type

SO-239) is provided on the transceiver for easy connection to a standard PL-259 cable termination.

Before installing the transceiver in a boat, consult your dealer for information regarding an adequate grounding system and prevention of electrolysis between fittings in the hull and water.

3. BASE STATION OPERATION

To operate the transceiver from your home or office, using regular house current as the power source, you will require a separate power supply capable of supplying 5 amps at a 13.8V DC output with a nominal input voltage of 220 volts AC, 50/60 Hz.

Simply connect the red (+) and black (-) leads to the transceiver to the corresponding DC terminals of the power supply.

NOTE : Do not attempt to operate this transceiver by connecting directly to 220V AC. When an AC power supply is used with the transceiver for base station operation any Citizens Band beam, dipole, ground plane or vertical antenna may be used. A ground plane vertical antenna will provide the most uniform horizontal coverage.

4. REMOTE SPEAKER

The external speaker jack (EXT. SPKR) on the rear panel is used for remote receiver monitoring. The external speaker should have 8 ohms impedance. When the external speaker is plugged in, the internal speaker is disconnected.

5. PUBLIC ADDRESS

An external 8 ohm 4-watt speaker must be connected to the (PA SPKR) jack located on the rear panel when the transceiver is used as a public address system. The speaker should be directed away from the microphone to prevent acoustic feedback. Physical separation or isolation of the microphone and speaker is important when operating the PA at high output levels.

6. OPERATING INSTRUCTIONS

The JACKSON operates on 226 AM/FM channels, 226 Upper Side Band channels and 226 Lower Side Band channels.

When you receive the SSB signal in the proper mode (USB or LSB),

audio sound may be either too high pitched or low pitched, indicating that your receiver may not be tuned to the exact same frequency as the transmitter to which it is listening. The JACKSON is equipped with a Clarifier. By tuning the Clarifier, you can slightly change the frequency of the receiver, so you get a normal tone.

)

)

D. OPERATING CONTROLS

Your JACKSON, designed for ease of operation, is provided with the following operating controls :

1. **OFF/ON VOLUME** : To turn the transceiver on, rotate the control clockwise past click. To turn the transceiver off, rotate the control counterclockwise past click. Rotate the control clockwise for a comfortable audio level.
2. **SQUELCH** : The squelch control is normally set to a position which eliminates undesired background noise with no signal present. With the audio adjusted to a satisfactory level, rotate the squelch control clockwise to the point where the sound from the speaker is cut off. In this position, there will be no sound from the speaker until a signal is received. In order to hear weak signals, it may be necessary to rotate the squelch control counterclockwise, allowing some background noise to be heard.
3. **P.A. SWITCH (on SQUELCH) CONTROL** : Full counterclockwise rotation of the squelch control engages the PA function. The PA function should not be used unless an external speaker is connected. In the squelch (or CB) position, the PA function is disabled and the radio will transmit and receive on the selected channel.
4. **MODE SELECTION** : This switch selects AM, FM, USB, or LSB mode of operation. This selector changes the mode of operation of both transmitter and receiver simultaneously. Set the selector to the mode on which you wish to communicate.
5. **MIKE GAIN** : This control is used to adjust, as required, microphone input sensitivity for optimum amount of modulation in transmit. President Electronics citizen's band transceivers have been designed to permit the user to attain levels of modulation up to 100 % depending on the setting of the microphone gain control, using the microphone provided with the unit. President's automatic compression and peak limiting circuits assure maximum modulation with minimum distortion.

6. **RF GAIN** : This control is used primarily to optimize reception in strong signal areas. Gain is reduced by counterclockwise rotation of the control.
7. **CLARIFIER** : The clarifier control is normally set to the center position. This feature has several uses and can greatly enhance receiver operation. First, if a received signal is slightly off frequency, this control can be operated as required to optimize the receiver frequency. The effectiveness of this clarifier feature under these conditions can be observed either by listening for a more readable signal at the speaker or by noting the S-meter reading when the clarifier control is operated. Another effective application of this control is in eliminating adjacent channel interference from strong signals. Operate this control, as required, to obtain minimum adjacent channel interference.
8. **METER MODE SWITCH** :
S/RF Position : Meter indicates relative transmitter output power when transmitting, input signal strength when receiving.
MOD Position : Meter indicates average percentage of modulation.
9. **NB/ANL SWITCH** : When switch is placed in NB/ANL position, the Automatic Noise Limiter and the RF Noise Blanker are activated simultaneously.
10. **+ 10KHZ FREQUENCY SHIFT SWITCH** : When switch is placed in + 10Khz position, frequency is shifted 10Khz up. On following channels, a channel can be used by setting this switch to + 10Khz position.

<u>Normal</u>	<u>+ 10 KHz</u>
3	3A
7	7A
11	11A
15	15A
19	19A

11. **BAND SWITCH** : This switch is used to select the band of frequency.
12. **CHANNEL SELECTOR** : This switch is used to select any one of the 40 Citizens Band channels. Channel 9 has been reserved for emergency communications involving immediate safety of life of individuals or

immediate protection of property.

13. **ROGER BEEP SWITCH** : When this switch is placed in the ROGER BEEP position, your radio automatically transmits the audio sign at the end of your transmission. The listener can easily note your transmission is over through the sign.

E. ALIGNMENT PROCEDURES

1. ALIGNMENT OF PLL & CARRIER OSCILLATOR PORTION

a) Test Equipment Required

- Oscilloscope
- DC Power Supply (13.8V)
- Frequency Counter (0 - 50MHz)
- DC Voltmeter


b) Alignment Procedure

STEP	PRESET TO	ADJUSTMENT	REMARKS
1	Channel : 40 Mode : AM, RX. Clari : Center Band : E PA/CB : CB	L12	Connect DC Voltmeter to TP-2 (R122). Adjust for 6.0V \pm 0.1V on DC Voltmeter. Confirm 2V to A Band Channel 1.
2	Same as above except BAND : C Channel : 19 Mode : AM.FM, RX	L13	Connect Oscilloscope to TP-3 (R73). Adjust for maximum reading on Oscilloscope.
3	Same as above	L14	Connect Frequency Counter to TP-3 (R73). Adjust for 16.490Mhz \pm 20Hz on the Frequency Counter.
4	Same as Step 2 except Mode : USB, RX	L15	Connect Frequency Counter to TP-3 (R73). Adjust for 16.4925MHz \pm 20Hz on the Frequency Counter.
5	Same as Step 4 except Mode : LSB, RX	L16	Connect Frequency Counter to TP-3 (R73). Adjust for 16.4875MHz \pm 20Hz on the Frequency Counter.
6	Same as above	L24	Connect Frequency counter to TP-4 (R104). Adjust for 10.6975MHz \pm 20Hz on the Frequency Counter.

STEP	PRESET TO	ADJUSTMENT	REMARKS
7	Same as Step 4	L23	Connect Frequency counter to TP-4 (R104). Adjust for 10.6925MHz ± 20Hz on the Frequency counter.
8	Same as Step 4 except Mode : AM, TX	L22	Connect Frequency counter to TP-5 (R82). Adjust for 10.695MHz ± 20Hz on the Frequency counter.

) c) Test Equipment Connection (see following page)

)

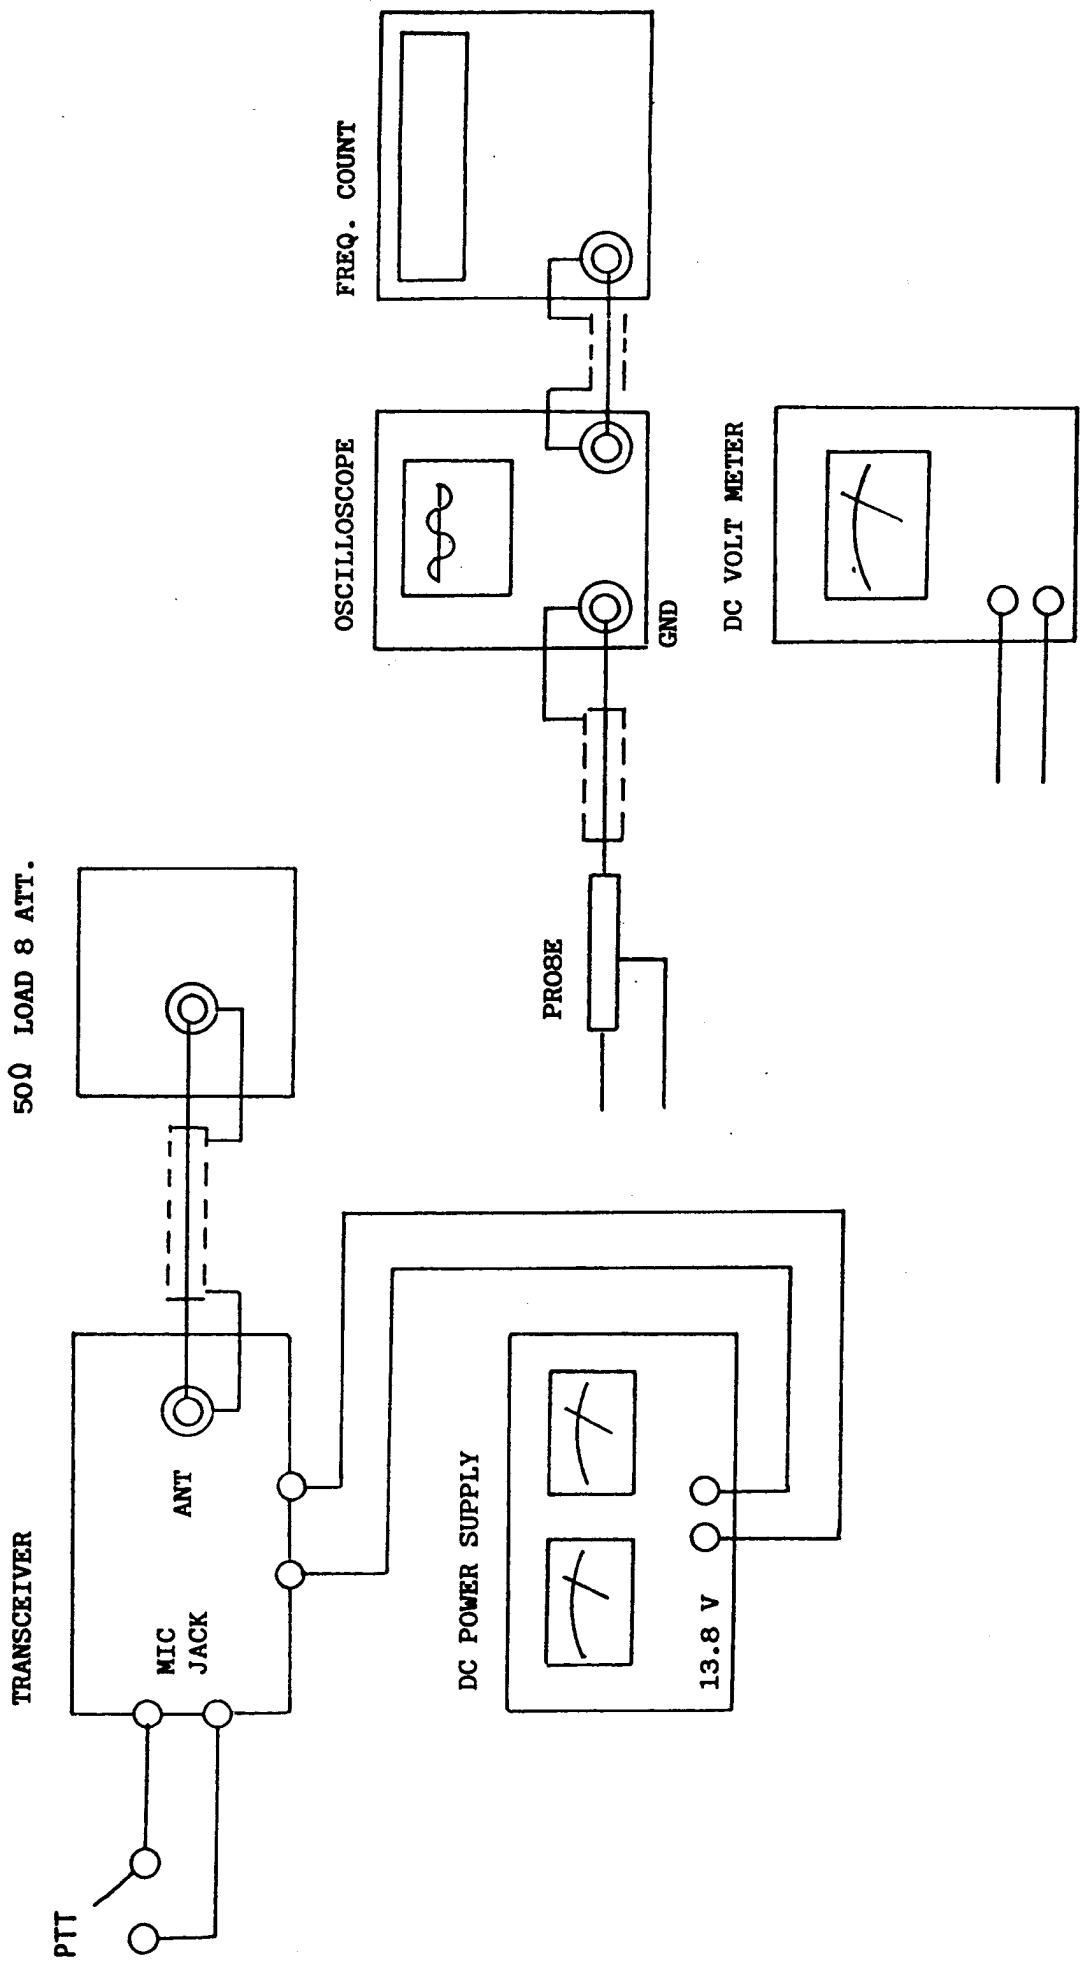

ALIGNMENT POINTS

TP3
R73
—○

L13



TP2
R122
○

L12

A small square outline representing an alignment point.

○— TP5
R92

L16 L14



L24 L22



○— TP4
R104

2. ALIGNMENT OF TRANSMITTER PORTION

a) Test Equipment Required


- AF Signal Generator (1) for 500Hz and 1.000Hz
- AF Signal Generator (2) for 2.400Hz
- AF VTVM (150mV full scale)
- RF VTVM (50V full scale)
- RF Powermeter (10W Max. Thruline type)
- 50 ohm Dummy Load
- Oscilloscope
- Harmonic Meter
- DC Voltmeter
- DC Ammeter (150mA full scale)


b) Alignment Procedure

STEP	PRESET TO	ADJUSTMENT	REMARKS
1	Channel : 19 Band : C Mode : USB, TX. No Modulation MIC GAIN : CW PA/CB : CB	VR10	Disconnect the PC-834AA from Check Point of Main P.C.Board and connect DC Ammeter to TP-8(+), TP-6(-). Adjust for 50mA on DC Ammeter.
2	Same as Step 1	VR9	Connect DC Ammeter to TP-8(+), TP-7(-). Adjust VR9 to obtain the current 80mA.
3	Mode : USB	L42	Disconnect the DC Ammeter. Connect PC-834AA to Check Point of Main P.C.Board. Connect power meter, RF VTVM and Oscilloscope. Set VR8 CW maximum. Turn the Cor of L42 CW maximum at the bottom.
4	Same as above	L41,43,49	Adjust coils for the maximum indication. While then, keep output voltage under 25V by adjusting SG.
5	Same as above	L42	Set E Band Channel 40, adjust for maximum reading and then set A Band Channel 1, adjust for minimum difference from E Band Channel 40.
6	Channel : 19 Band : E Mode : USB 2 Tone AF SG : 30mV	L30	Adjust L30 to obtain the maximum indication on the RF VTVM.


STEP	PRESET TO	ADJUSTMENT	REMARKS
7	same as above	VR8	Adjust VR3 to obtain RF output of 32.4V on the RF VTVM.
8	Same as Step 1	VR5	Adjust VR5 to obtain the minimum carrier leakage between USB and LSB.
9	Mode : AM, TX. No Modulation Channel : 19 Band : E	VR11	Adjust VR11 to obtain RF carrier power of 10W on RF Power meter.
10	Same as above except Push SW : S/RF	VR7	Adjust for the needle of Bilt-in Meter to blank zone of TX Power Meter.
11	Same as above except AF SG : 30mV 1KHz Mod.	VR12	Adjust VR12 to obtain 90% (negative) modulation.
12	Same as above except mode : FM	VR4	Connect Deviation meter. Adjust for 3kHz Deviation on Deviation meter.
13	Channel : 19 Band : C Push SW : MOD	VR3	Set AF SG to 50% Modulation, then add 16dB. Adjust VR3 to 100% mudulation indication on the transceiver meter.
14	Channel : 19 Band : C No Modulation Mode : AM	VR6	Adjust Transmitter Frequency for 27.185MHz ± 100Hz.

c) Test Equipment Connection (see following page)

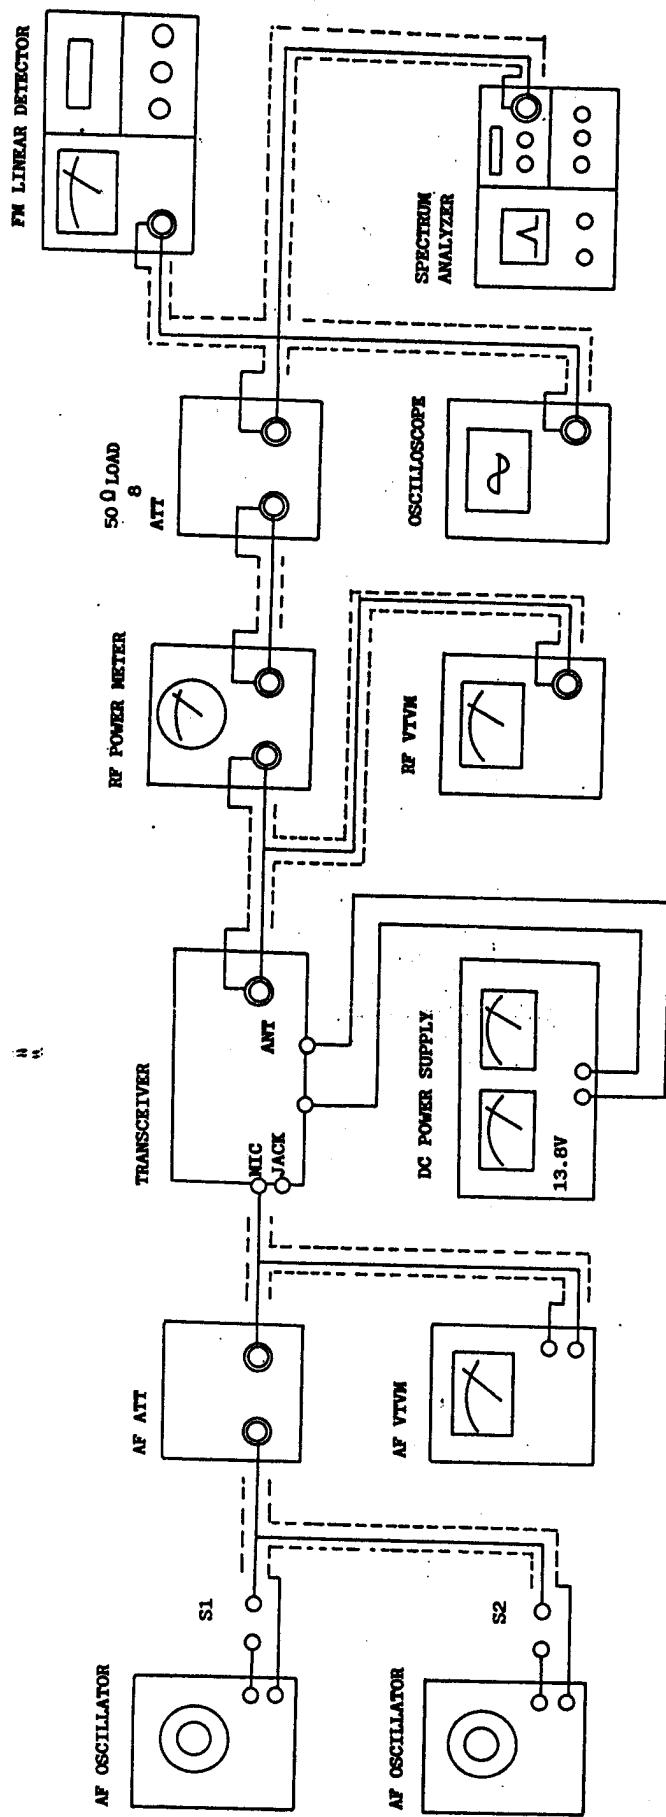

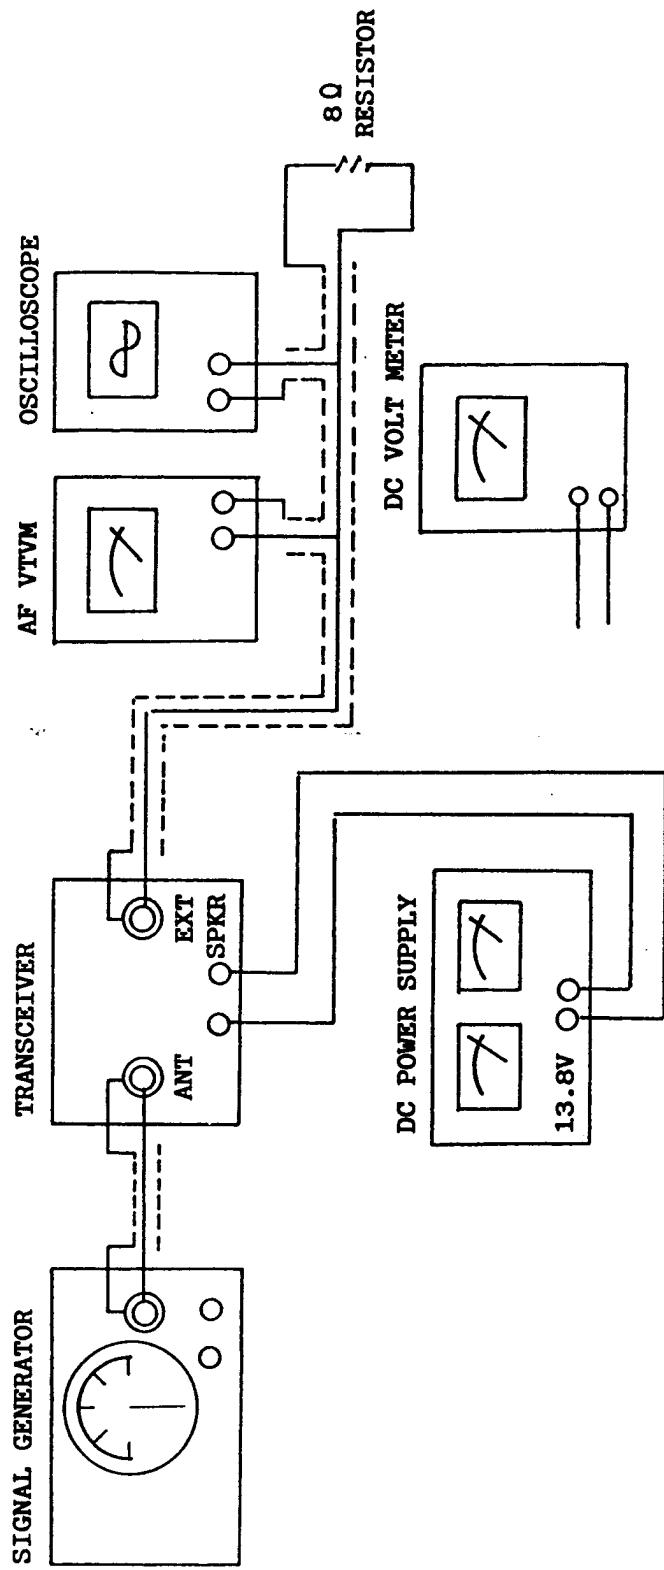

ALIGNMENT POINTS

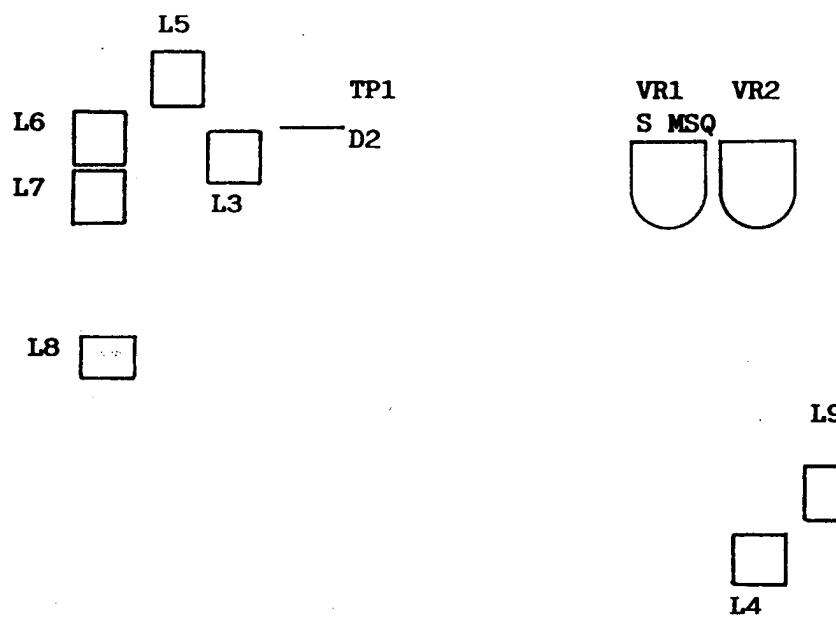

3. ALIGNMENT OF RECEIVER PORTION

a) Test Equipment Required

- RF SSG
- DC Voltmeter
- AF VTVM
- Oscilloscope

b) Alignment Procedure

Connect the AF VTVM and 8 ohm dummy load to EXT SP Jack during the alignment of receiver portion.

STEP	PRESET TO	ADJUSTMENT	REMARKS
1	Channel : 19 Band : C NB/ANL : OFF MOD, S/RF : S/RF PA/SQL : SQL Clari : Center RF GAIN : CW AF VOL : CW MODE : AM		Set RF SG to Channel 19 with 30%, 1KHz modulation.
2	Same as above	L6	Turn the core of L8 to CW. maximum at the bottom.
3	Same as above	L5, 7, 8 9	Set the Unit to C Band Channel 19 AM, adjust coils for maximum reading.
4	Same as above	L6	Set the unit to C Band Channel 1 AM (SSG Channel 1), adjust for maximum reading and then set 1/4 turn CCW.
5	Same as above	VR1	Set the SSG to 100uV output with no-modulation. Adjust VR1 to obtain "S-9" on transceiver's meter.
6	Same as above	VR2	Adjust VR2 to turn off the squelch circuit when SSG output comes up to 1000uV.
7	Same as step 1 except MODE : USB	L3	Set SSG to C Band Channel 18 USB with no-modulation, and output level is 5uV. Connect Oscilloscope to TP-1 (D2) so that adjust for maximum reading.
8	Same as Step 1 except Mode : FM	L4	Set the SSG to FM 1KHz, 1.5KHz Deviation 1mv. Adjust L4 to obtain the maximum indication on Oscilloscope.

ALIGNMENT POINTS

BIAS
VR10

L33

BIAS
VR9

TP7

L30

TP6

TP8

VR7
RF.M

VR9
ALC

VR12
AMC

VR11
AM PWR

L40 L41



) L43

VR3
MOD.M



VR4
DEV



VR5
CARRIER




VR6
TX. FREQ.



F. FREQUENCIES

CHANNEL	A BAND MHZ	B BAND MHZ	C BAND MHZ	D BAND MHZ	E BAND MHZ
1	26.065	26.515	26.965	27.415	27.865
2	.075	.525	.975	.425	.875
3	.085	.535	.985	.435	.885
4	.105	.555	27.005	.455	.905
5	.115	.565	.015	.465	.915
6	.125	.575	.025	.475	.925
7	.135	.585	.033	.485	.935
8	.155	.605	.055	.505	.955
9	.165	.615	.065	.515	.965
10	.175	.625	.075	.525	.975
11	.185	.635	.085	.535	.985
12	.205	.655	.105	.555	28.005
13	.215	.665	.115	.565	.015
14	.225	.675	.125	.575	.025
15	.235	.685	.135	.585	.035
16	.255	.705	.155	.605	.055
17	.265	.715	.165	.615	.065
18	.275	.725	.175	.625	.075
19	.285	.735	.185	.635	.085
20	.305	.755	.205	.655	.105
21	.315	.765	.215	.665	.115
22	.325	.775	.225	.675	.125
23	.355	.805	.255	.705	.155
24	.335	.785	.235	.685	.135
25	.345	.795	.245	.695	.145
26	.365	.815	.265	.715	.165
27	.375	.825	.275	.725	.175
28	.385	.835	.285	.735	.185
29	.395	.845	.295	.745	.195
30	.405	.855	.305	.755	.205
31	.415	.865	.315	.765	.215
32	.425	.875	.325	.775	.225
33	.435	.885	.335	.785	.235
34	.445	.895	.345	.795	.245
35	.455	.905	.355	.805	.250
36	.465	.915	.365	.815	.265
37	.475	.925	.375	.825	.275
38	.485	.935	.385	.835	.285
39	.495	.945	.395	.845	.295
40	.505	.955	.405	.855	.305

G. BLOCK DIAGRAM

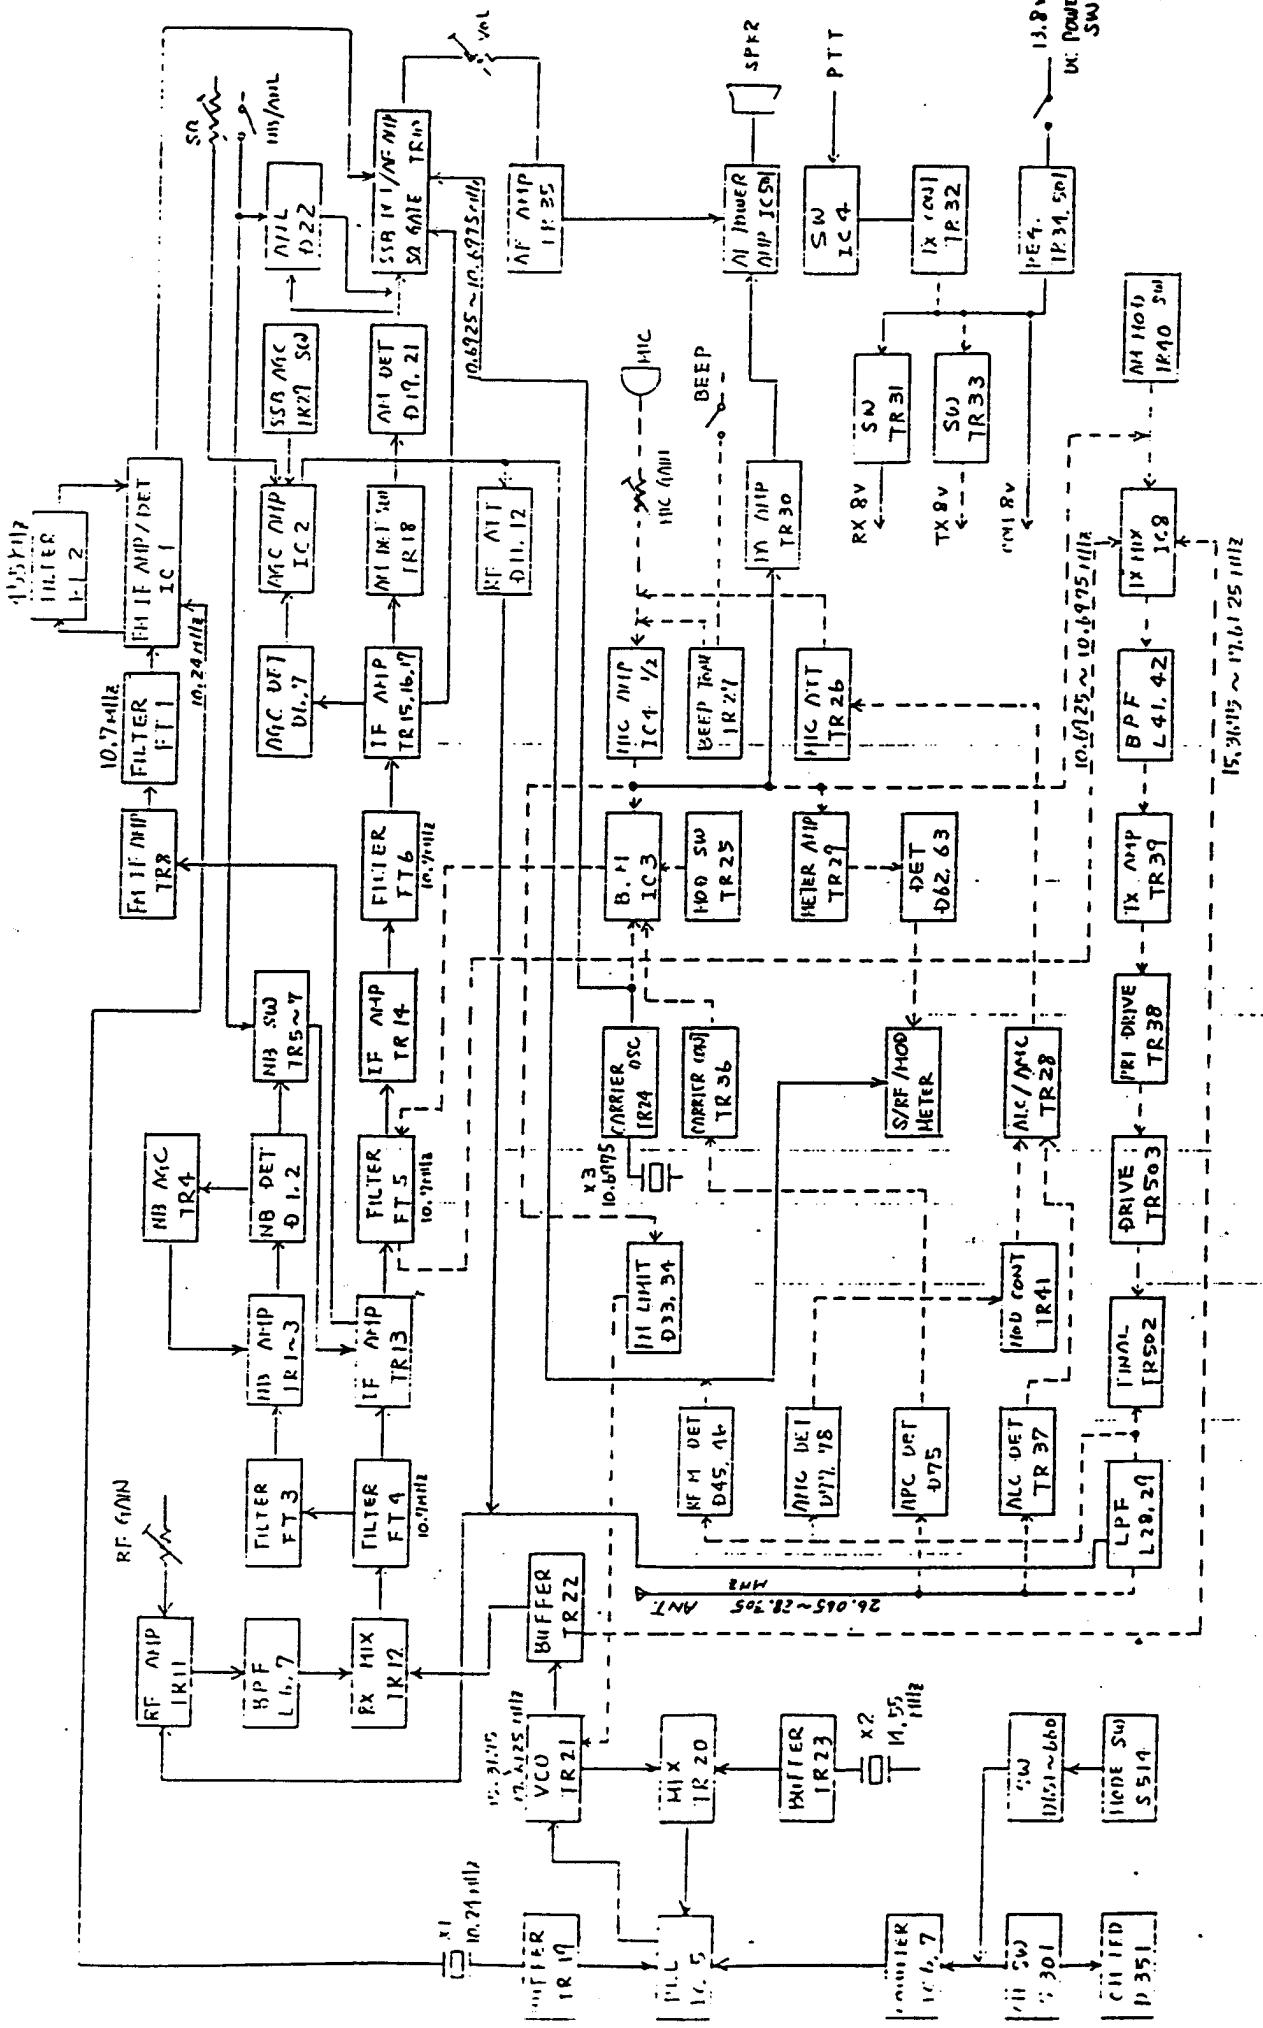

ମୁଦ୍ରଣ ଦିନ
୧୮-୫୪୭
ଜାନ୍ମନୀ

RX

H. SCHEMATIC DIAGRAMS/WIRING DIAGRAM/PC BOARDS

)

)

SIEGE SOCIAL
Route de SETE - BP 100
34540 BALARUC - Tel : 67.46.27.27
Téléc : 490534F - Fax : 67.48.48.49



SUCCURSALE «ILE DE FRANCE»
50/56, Rue du Pré des Aunes - Parc d'activités des Arpentis
77340 PONTAULT- COMBAULT
Tel : (1) 60.29.28.27 - Fax : (1) 60.28.44.00

BRANCHEMENT PRISE MICRO 6 BROCHES NC 518

BRANCHEMENT PRISE MICRO 4 BROCHES NC 514


DESIGNATION CABLES	
N° BROCHES	
1	Modulation
2	RX
3	TX
4	Non connectée
5	Masse
6	Alimentation

DESIGNATION CABLES	
N° BROCHES	
1	Massé
2	Modulation
3	TX
4	RX

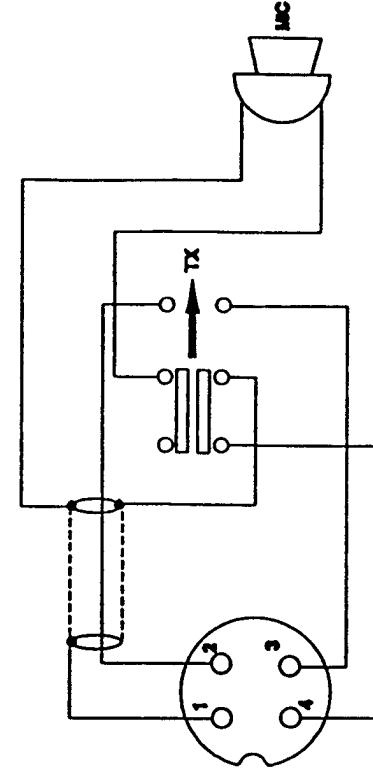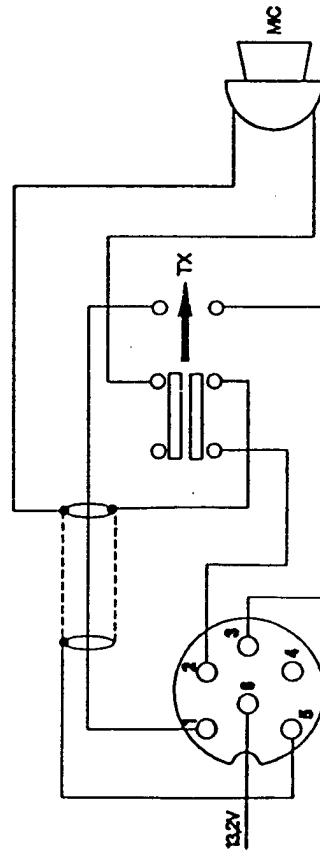


ATTENTION BIEN VÉRIFIER LE BRANCHEMENT DE LA BROCHE 6

 SP501 SPEAKER






三

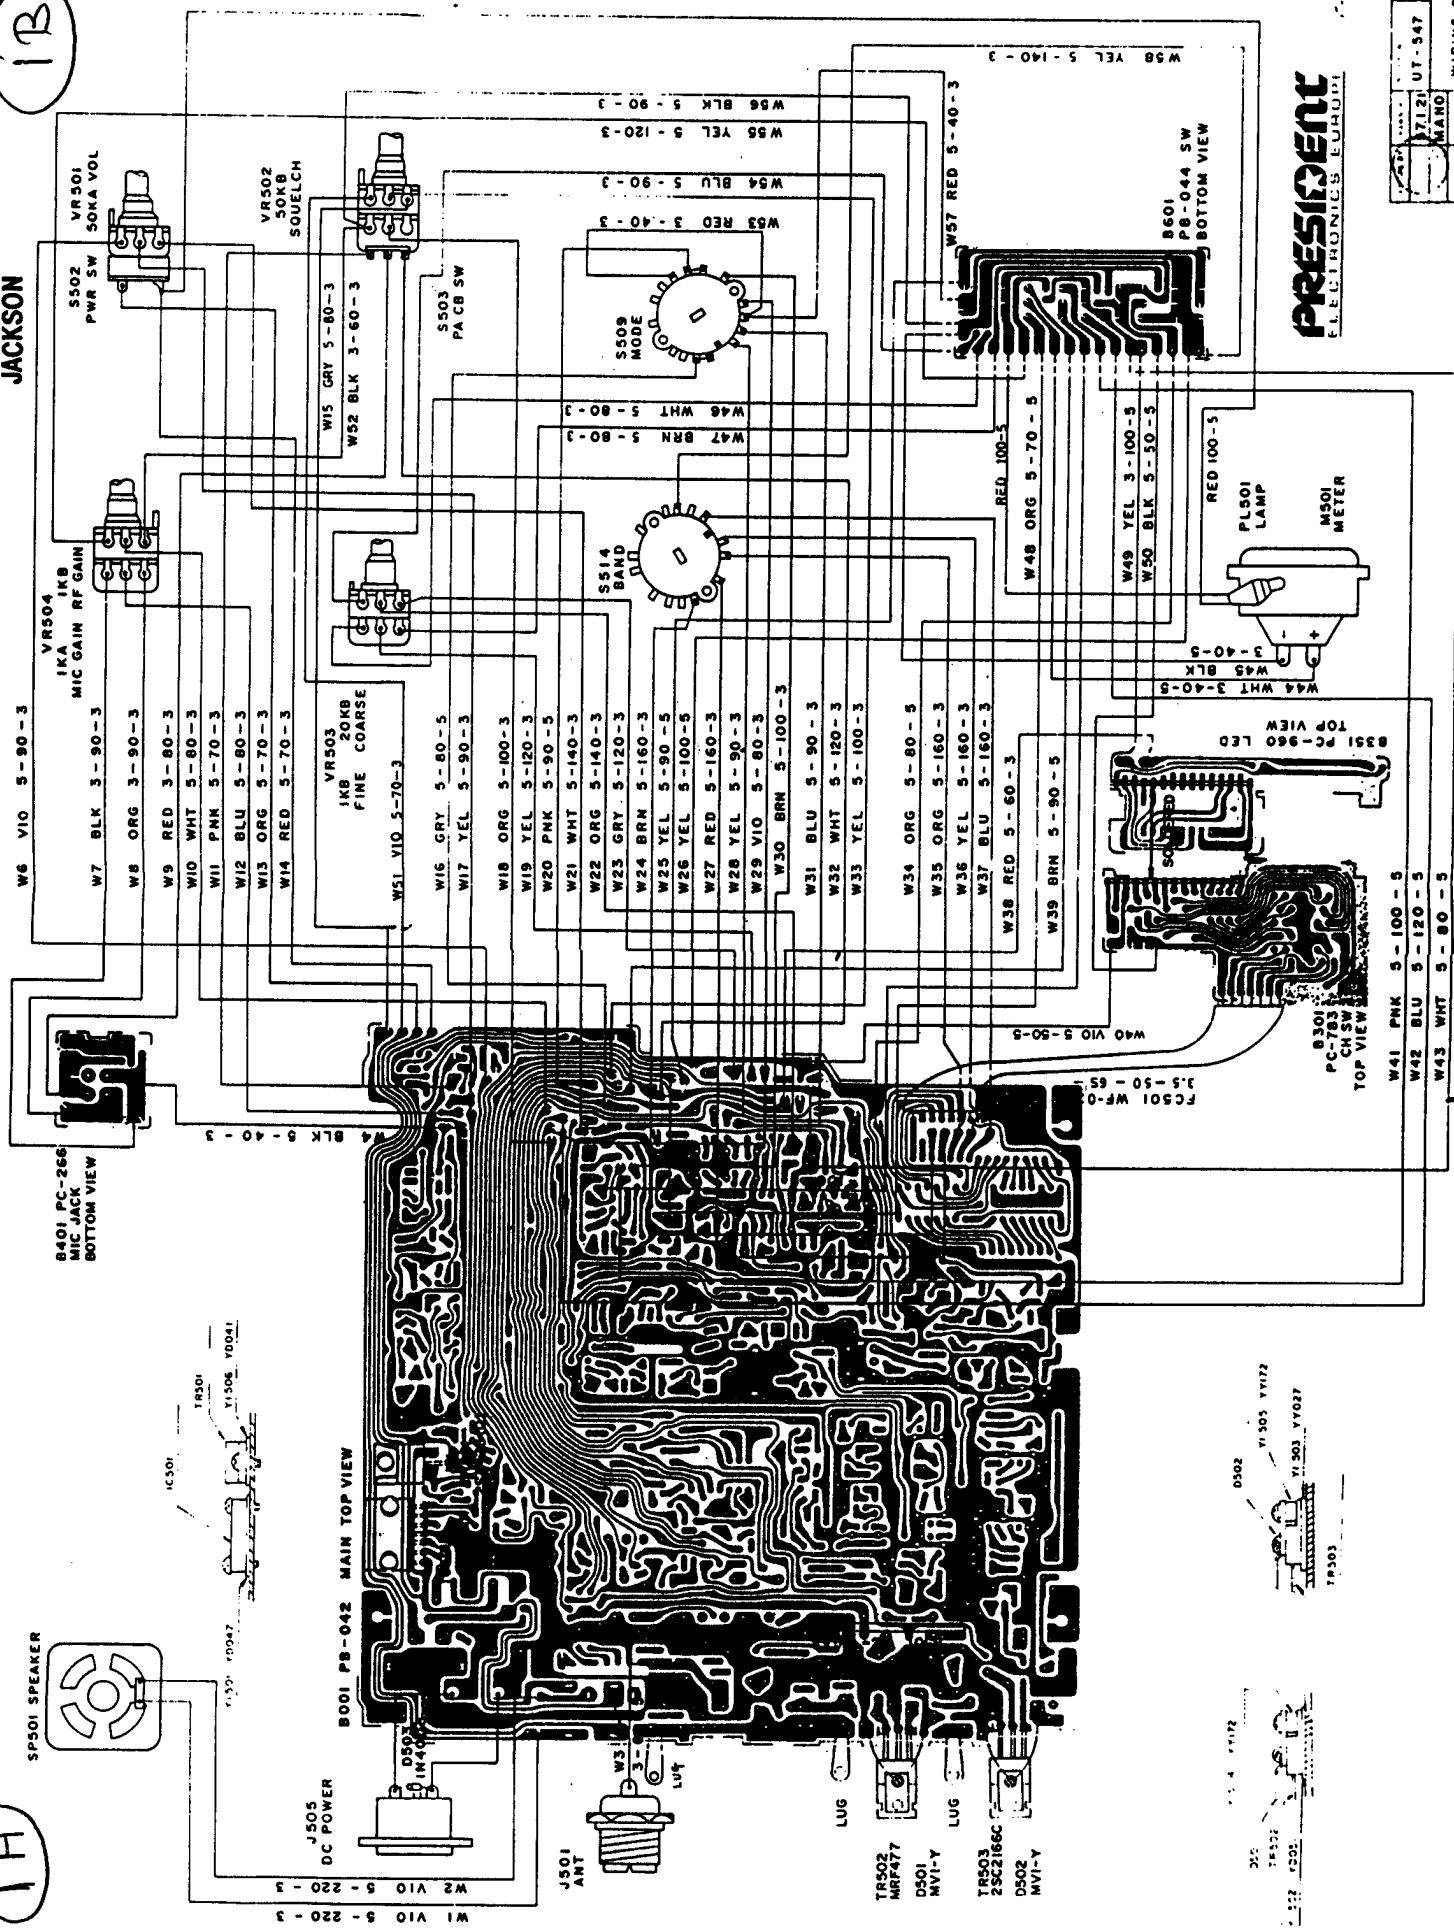


1A

SP501 SPEAKER

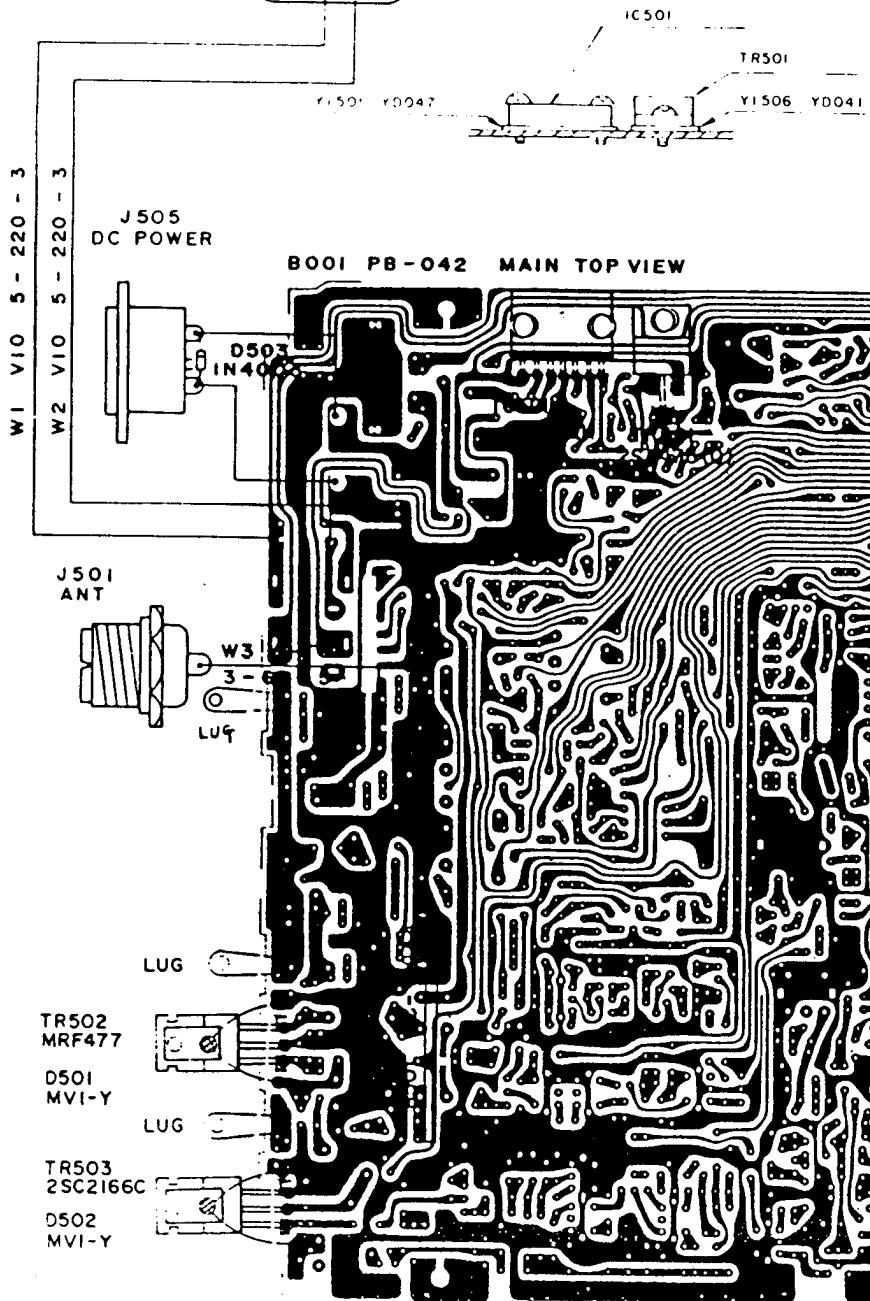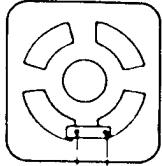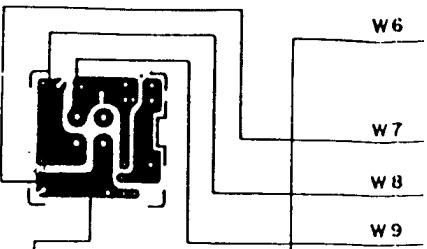B401 PC-266
MIC JACK
BOTTOM VIEWB301
PC-783
CH SW
TOP VIEW


W41	PNK	5 - 100 - 5
W42	BLU	5 - 120 - 5
W43	WHT	5 - 80 - 5

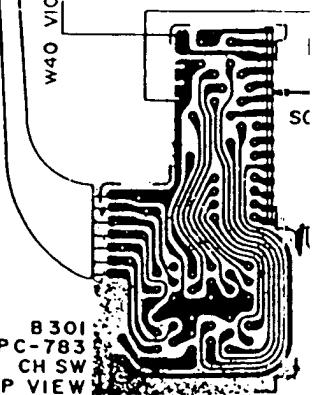FC501 WF-03
3.5 - 50 - 6S

JACKSON


W6 VIO 5-90-3

1B

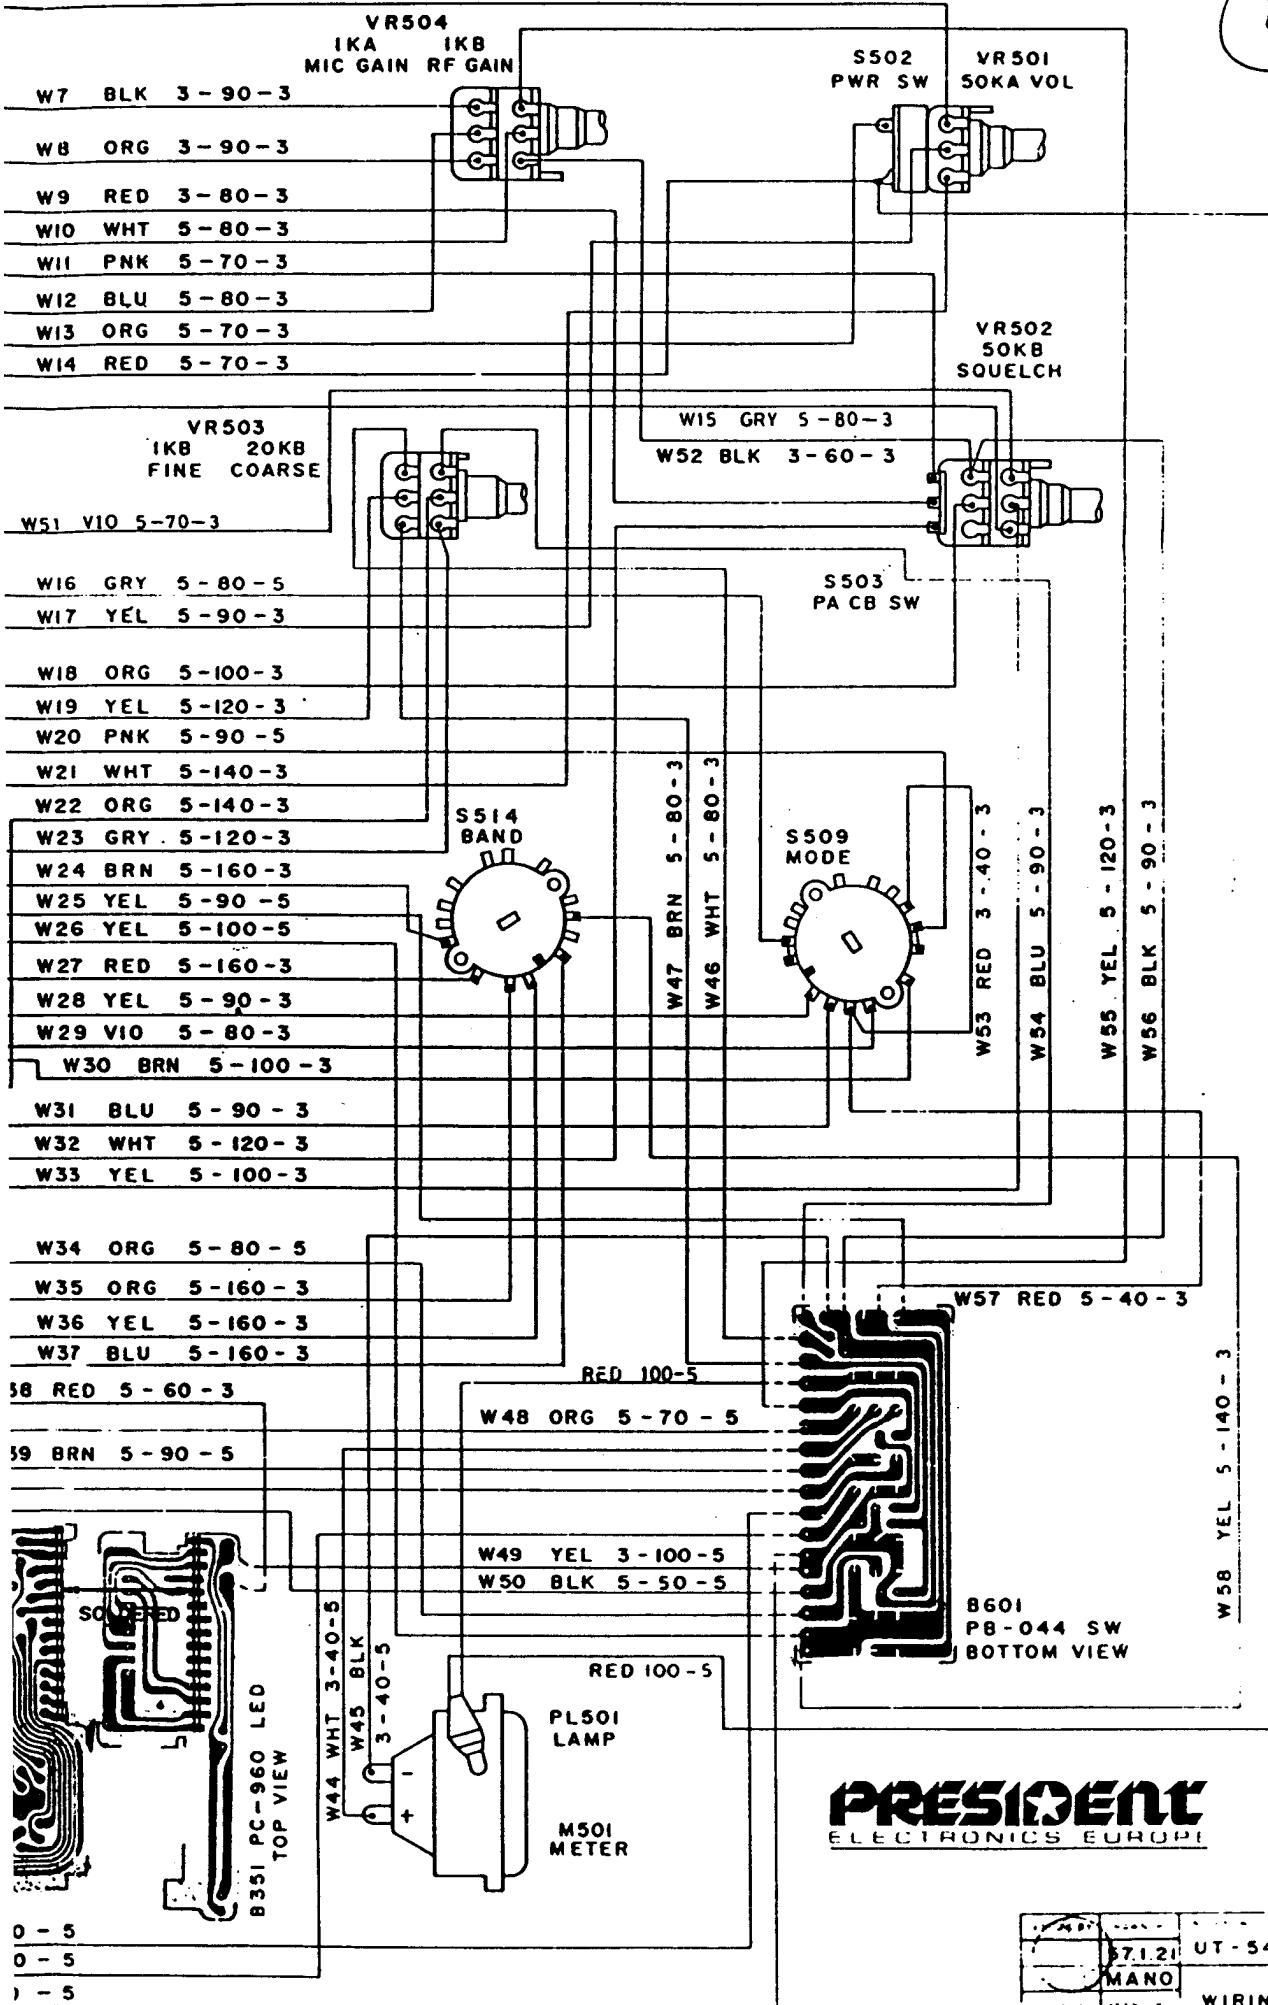

PRESIDENT
ELECTRONICS EUROPE


ESTATE.E.C

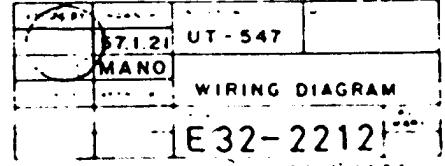

JACKSON


præsident
ELECTRONICS EUROPE

23

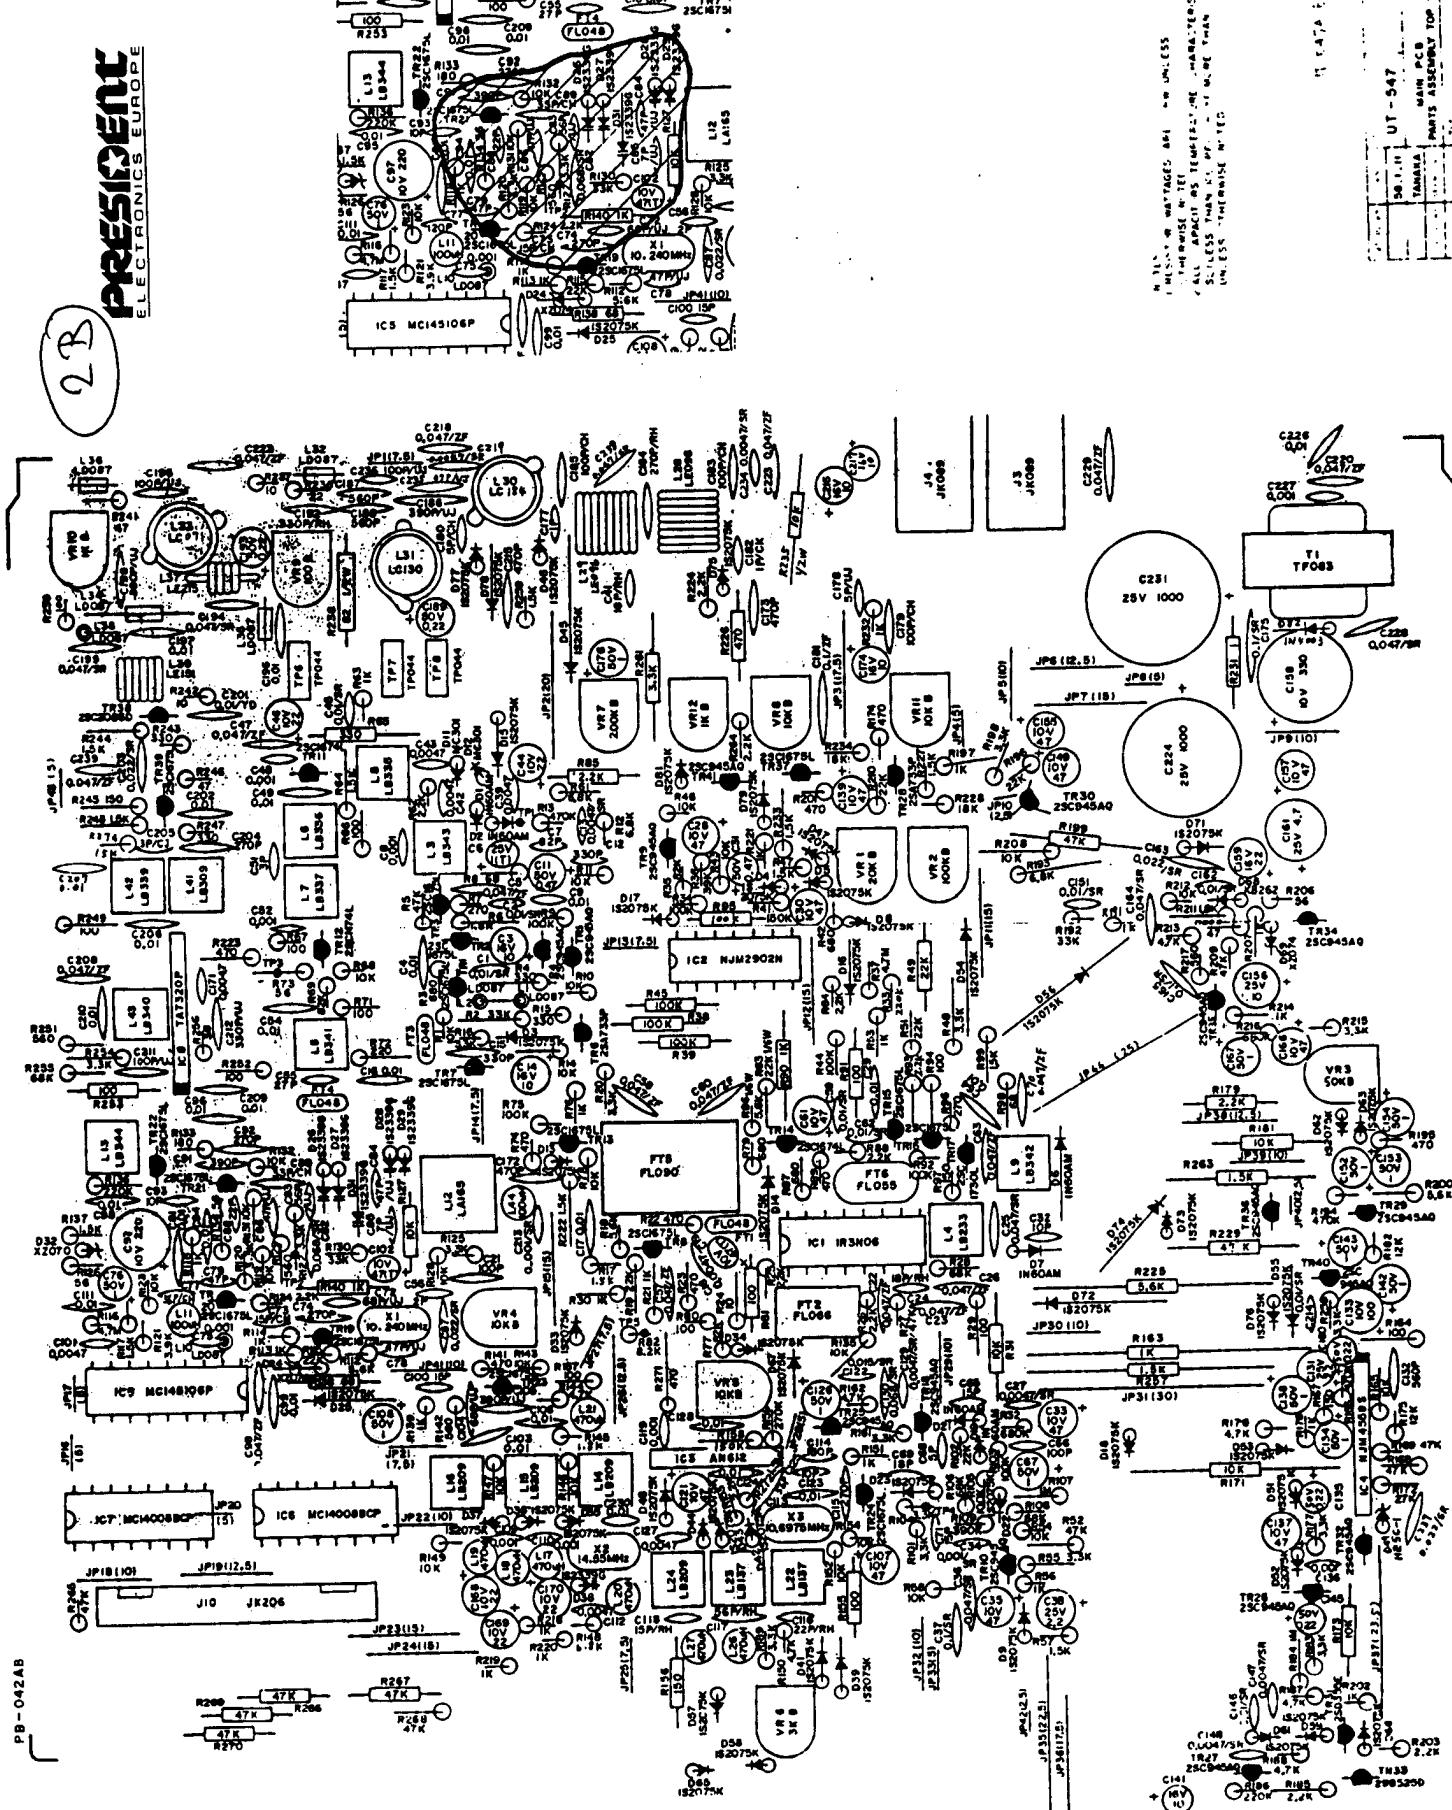



PB-042AB

(2A)

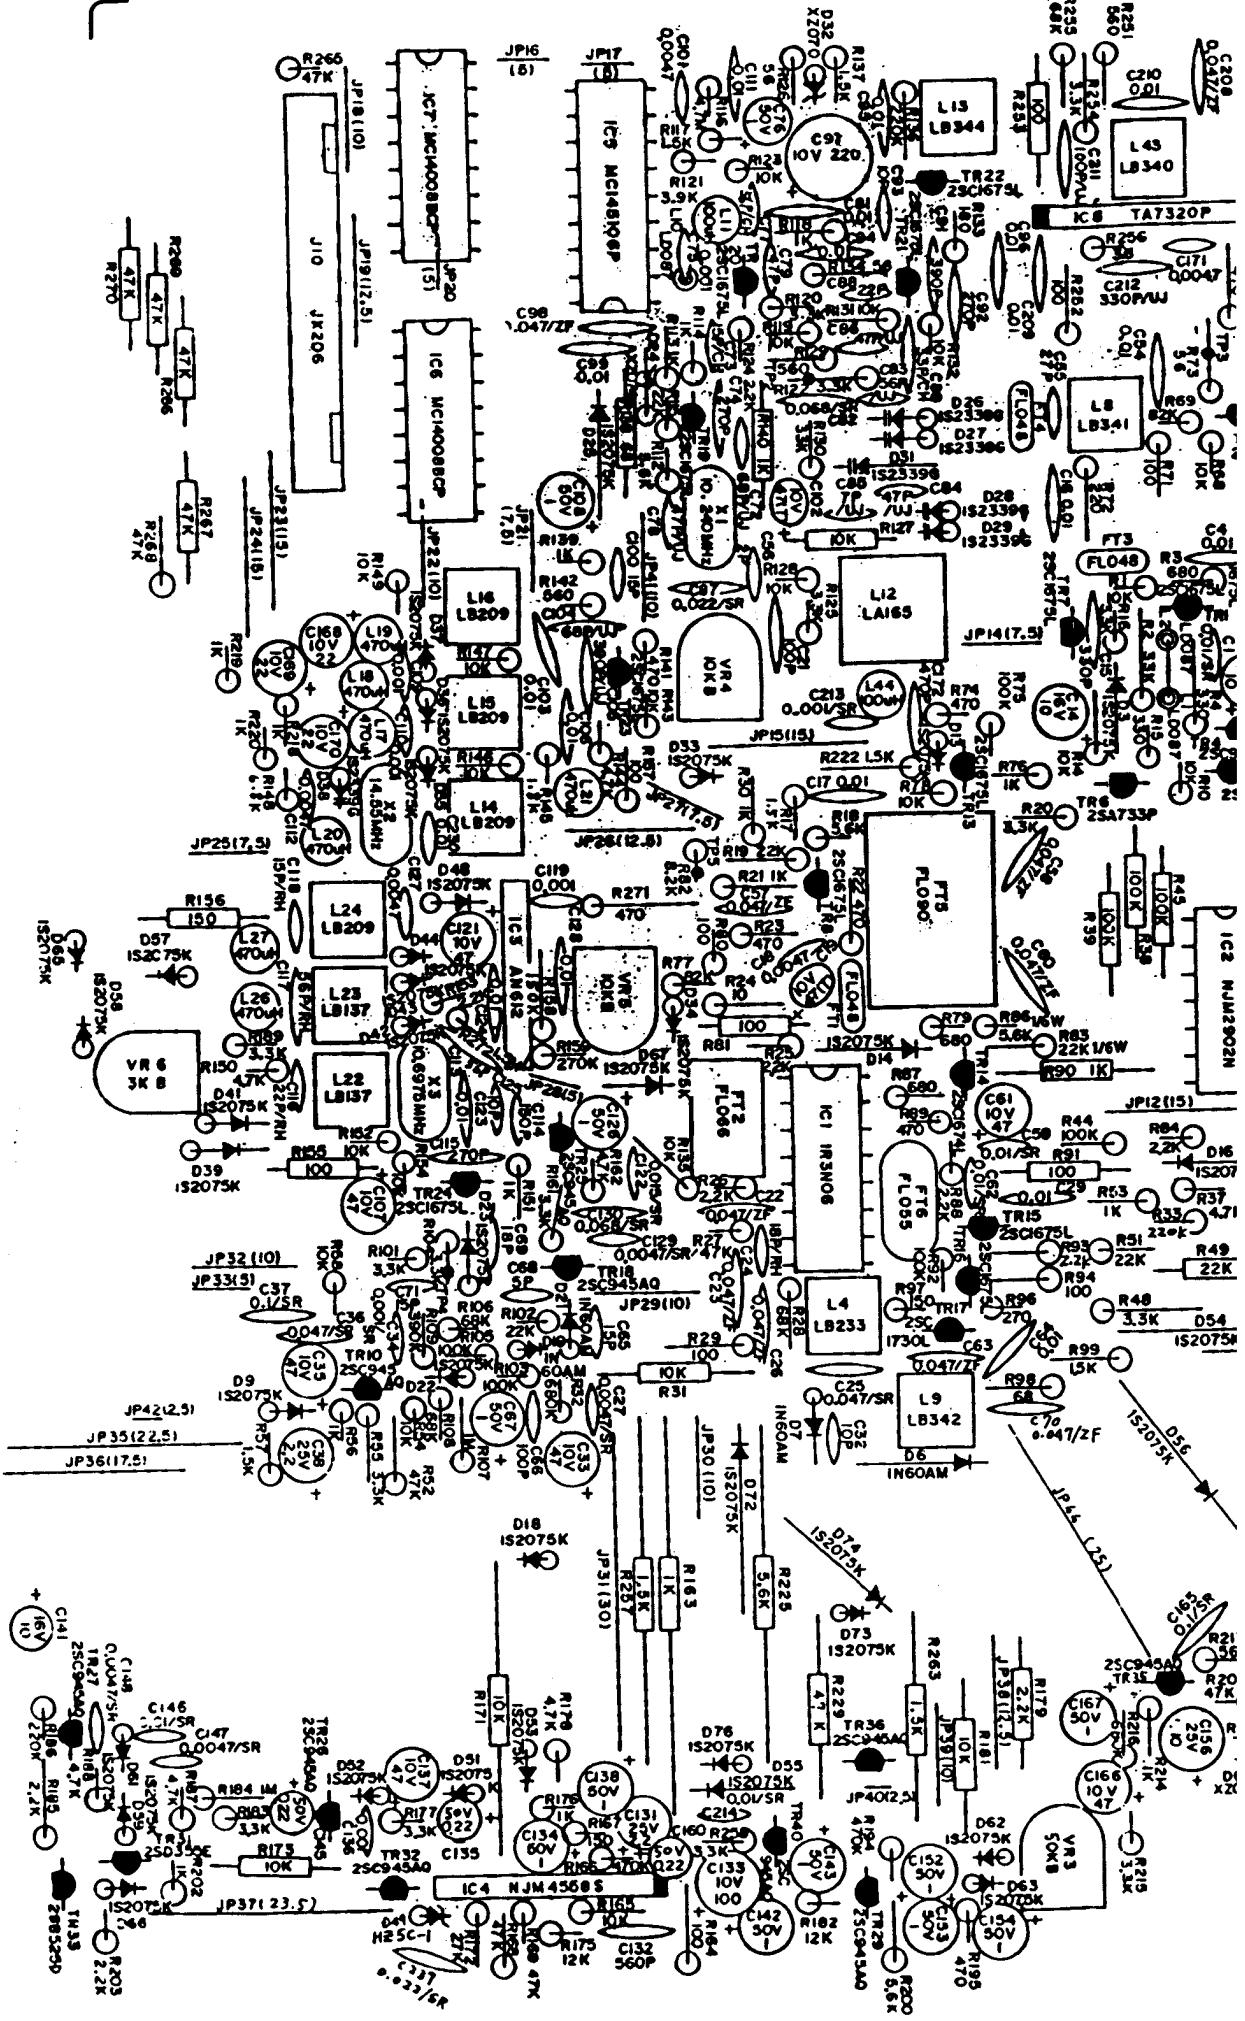

PRESIDENT
ELECTRONICS EUROPE

23

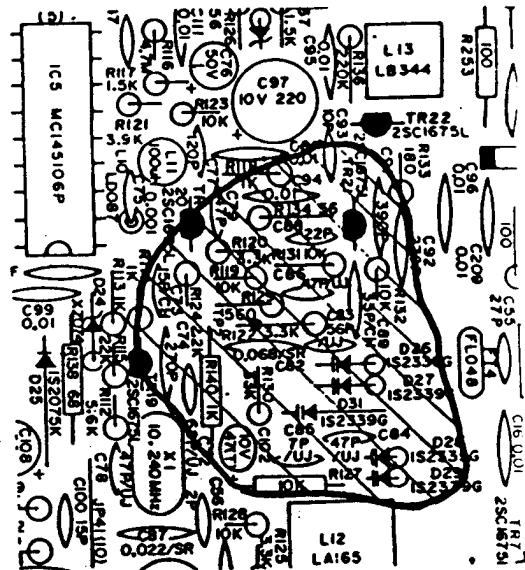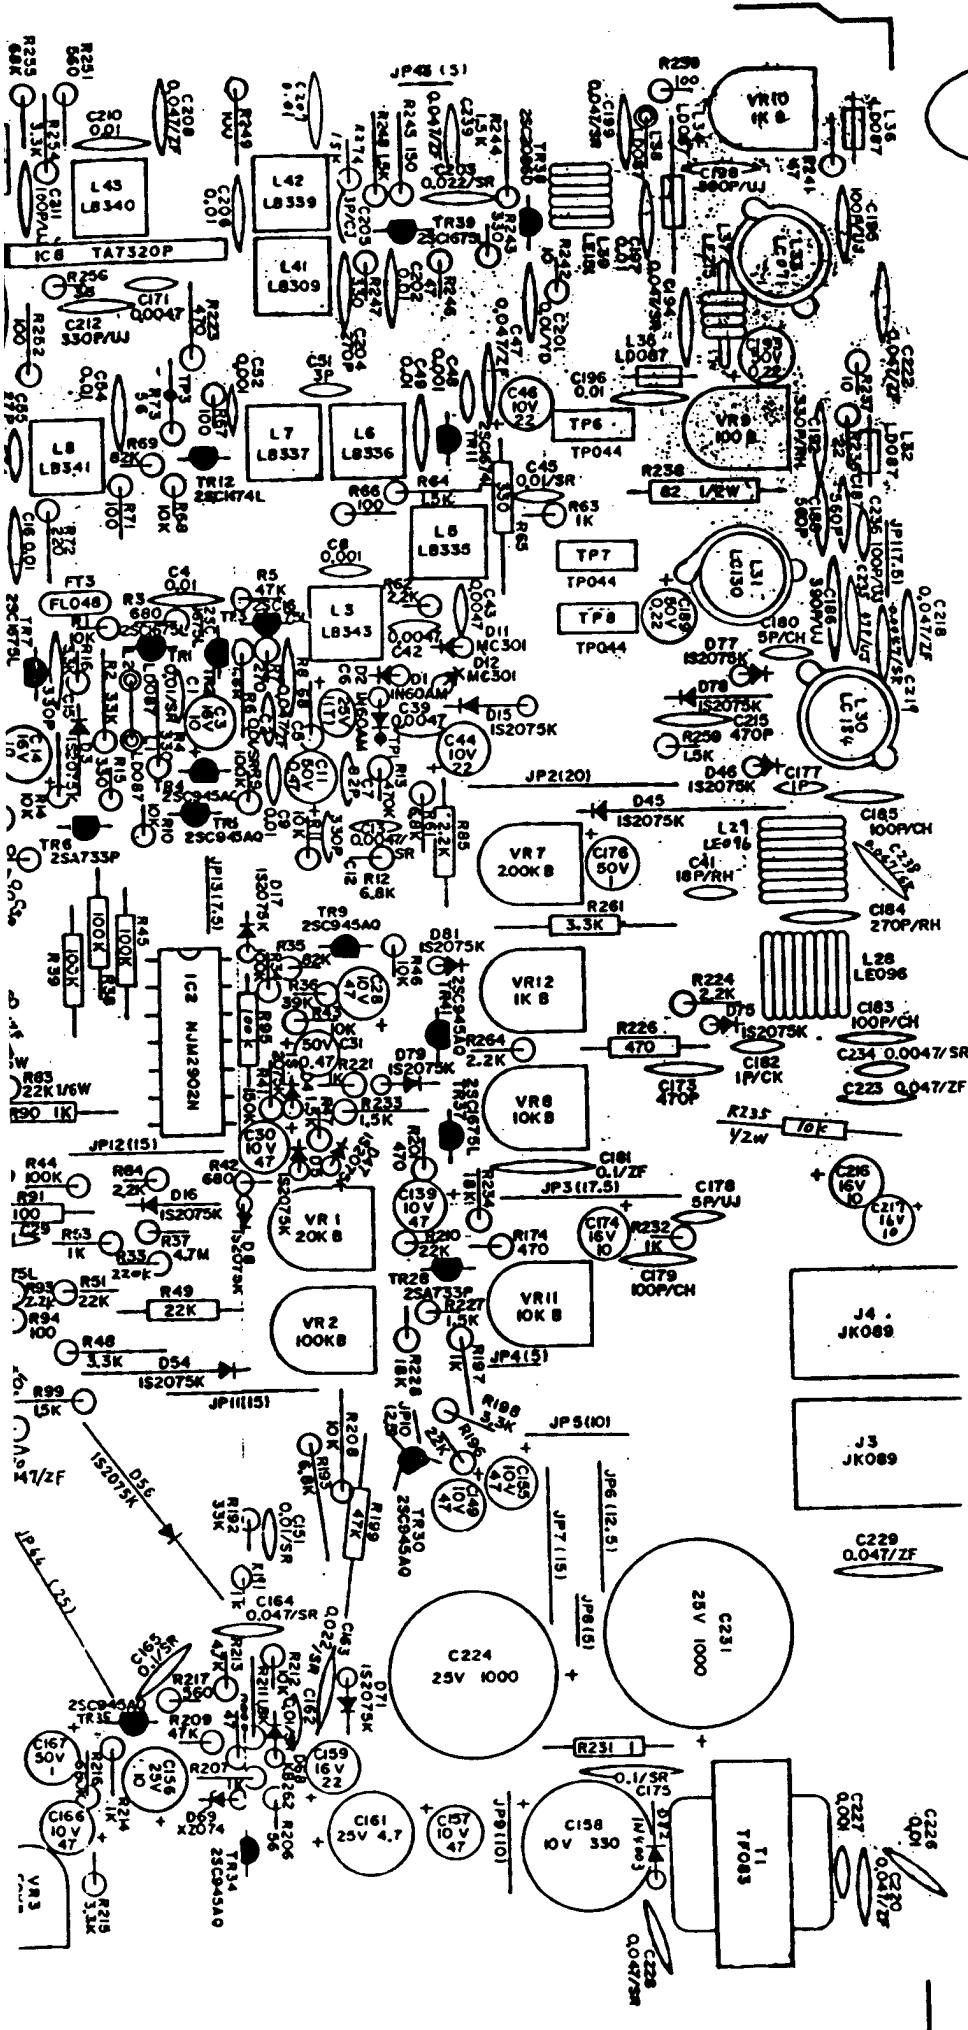

N.T.E.
THESE R. WATTAGES ARE KW UNLESS
OTHERWISE N.T.E.
ALL CAPACITORS TEMPERATURE CHARACTERISTIC
SILESS THAN K.C. P.F. = 0.9 MORE THAN
UNLESS OTHERWISE NOTED

19.5.474 2


		UT - 547
	TANAKA	MAIN PCB
		PARTS ASSEMBLY TOP VI
		E22-4674

E22-4674
INDEN CCP

PRESIDENT

JACKSON N 3B


3A

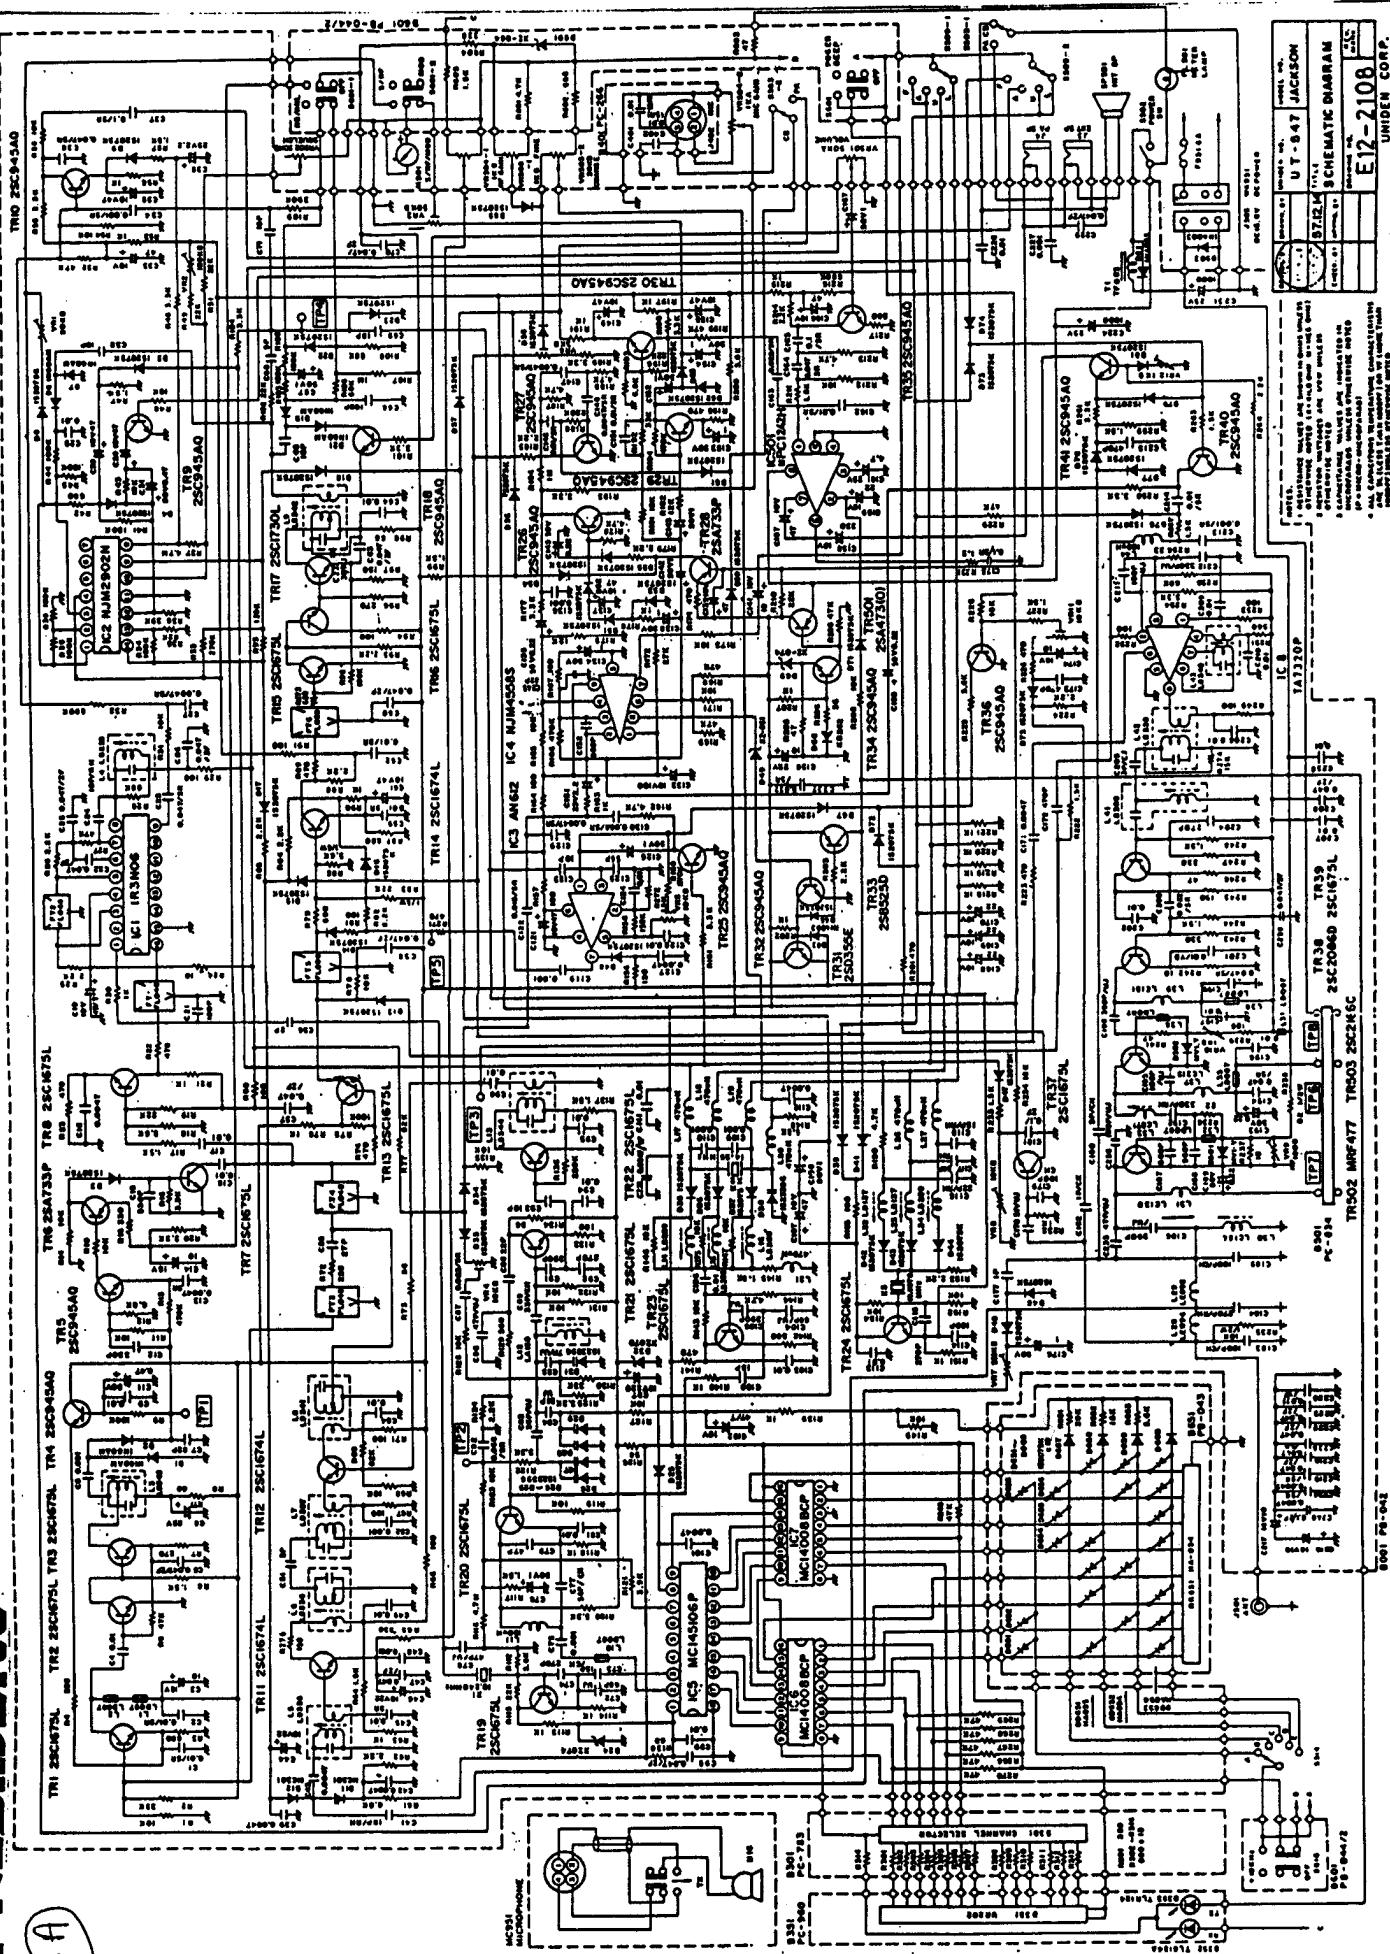

TR1 2SC4540
TR2 2SC4540
TR3 2SC4575L
TR4 2SC4540
TR5 2SC4575L
TR6 2SC4540
TR7 2SC4575L
TR8 2SC4540
TR9 2SC4575L
TR10 2SC4575L
TR11 2SC4575L
TR12 2SC4574L
TR13 2SC4575L
TR14 2SC4574L
TR15 2SC4575L
TR16 2SC4575L
TR17 2SC4575L
TR18 2SC4540
TR19 2SC4575L
TR20 2SC4575L
TR21 2SC4575L
TR22 2SC4575L
TR23 2SC4575L
TR24 2SC4575L
TR25 2SC4540
TR26 2SC4540
TR27 2SC4575L
TR28 2SC4540
TR29 2SC4540
TR30 2SC4540
TR31 2SC4540
TR32 2SC4540
TR33 2SC4540
TR34 2SC4540
TR35 2SC4540
TR36 2SC4540
TR37 2SC4575L
TR38 2SC4540
TR39 2SC4540
TR40 2SC4540
TR41 2SC4540
TR42 2SC4540
TR43 2SC4540
TR44 2SC4540
TR45 2SC4540
TR46 2SC4540
TR47 2SC4540
TR48 2SC4540
TR49 2SC4540
TR50 2SC4540
IC1 MC1406P
IC2 MC1406P
IC3 MC1406P
IC4 MC1406P
IC5 MC1406P
IC6 MC1406P
IC7 MC1406P
IC8 MC1406P
PC-300
PC-301
PC-302
PC-303
PC-304
PC-305
PC-306
PC-307
PC-308
PC-309
PC-310
PC-311
PC-312
PC-313
PC-314
PC-315
PC-316
PC-317
PC-318
PC-319
PC-320
PC-321
PC-322
PC-323
PC-324
PC-325
PC-326
PC-327
PC-328
PC-329
PC-330
PC-331
PC-332
PC-333
PC-334
PC-335
PC-336
PC-337
PC-338
PC-339
PC-340
PC-341
PC-342
PC-343
PC-344
PC-345
PC-346
PC-347
PC-348
PC-349
PC-350
PC-351
PC-352
PC-353
PC-354
PC-355
PC-356
PC-357
PC-358
PC-359
PC-360
PC-361
PC-362
PC-363
PC-364
PC-365
PC-366
PC-367
PC-368
PC-369
PC-370
PC-371
PC-372
PC-373
PC-374
PC-375
PC-376
PC-377
PC-378
PC-379
PC-380
PC-381
PC-382
PC-383
PC-384
PC-385
PC-386
PC-387
PC-388
PC-389
PC-390
PC-391
PC-392
PC-393
PC-394
PC-395
PC-396
PC-397
PC-398
PC-399
PC-400
PC-401
PC-402
PC-403
PC-404
PC-405
PC-406
PC-407
PC-408
PC-409
PC-410
PC-411
PC-412
PC-413
PC-414
PC-415
PC-416
PC-417
PC-418
PC-419
PC-420
PC-421
PC-422
PC-423
PC-424
PC-425
PC-426
PC-427
PC-428
PC-429
PC-430
PC-431
PC-432
PC-433
PC-434
PC-435
PC-436
PC-437
PC-438
PC-439
PC-440
PC-441
PC-442
PC-443
PC-444
PC-445
PC-446
PC-447
PC-448
PC-449
PC-450
PC-451
PC-452
PC-453
PC-454
PC-455
PC-456
PC-457
PC-458
PC-459
PC-460
PC-461
PC-462
PC-463
PC-464
PC-465
PC-466
PC-467
PC-468
PC-469
PC-470
PC-471
PC-472
PC-473
PC-474
PC-475
PC-476
PC-477
PC-478
PC-479
PC-480
PC-481
PC-482
PC-483
PC-484
PC-485
PC-486
PC-487
PC-488
PC-489
PC-490
PC-491
PC-492
PC-493
PC-494
PC-495
PC-496
PC-497
PC-498
PC-499
PC-500
PC-501
PC-502
PC-503
PC-504
PC-505
PC-506
PC-507
PC-508
PC-509
PC-510
PC-511
PC-512
PC-513
PC-514
PC-515
PC-516
PC-517
PC-518
PC-519
PC-520
PC-521
PC-522
PC-523
PC-524
PC-525
PC-526
PC-527
PC-528
PC-529
PC-530
PC-531
PC-532
PC-533
PC-534
PC-535
PC-536
PC-537
PC-538
PC-539
PC-540
PC-541
PC-542
PC-543
PC-544
PC-545
PC-546
PC-547
PC-548
PC-549
PC-550
PC-551
PC-552
PC-553
PC-554
PC-555
PC-556
PC-557
PC-558
PC-559
PC-560
PC-561
PC-562
PC-563
PC-564
PC-565
PC-566
PC-567
PC-568
PC-569
PC-570
PC-571
PC-572
PC-573
PC-574
PC-575
PC-576
PC-577
PC-578
PC-579
PC-580
PC-581
PC-582
PC-583
PC-584
PC-585
PC-586
PC-587
PC-588
PC-589
PC-590
PC-591
PC-592
PC-593
PC-594
PC-595
PC-596
PC-597
PC-598
PC-599
PC-600
PC-601
PC-602
PC-603
PC-604
PC-605
PC-606
PC-607
PC-608
PC-609
PC-610
PC-611
PC-612
PC-613
PC-614
PC-615
PC-616
PC-617
PC-618
PC-619
PC-620
PC-621
PC-622
PC-623
PC-624
PC-625
PC-626
PC-627
PC-628
PC-629
PC-630
PC-631
PC-632
PC-633
PC-634
PC-635
PC-636
PC-637
PC-638
PC-639
PC-640
PC-641
PC-642
PC-643
PC-644
PC-645
PC-646
PC-647
PC-648
PC-649
PC-650
PC-651
PC-652
PC-653
PC-654
PC-655
PC-656
PC-657
PC-658
PC-659
PC-660
PC-661
PC-662
PC-663
PC-664
PC-665
PC-666
PC-667
PC-668
PC-669
PC-670
PC-671
PC-672
PC-673
PC-674
PC-675
PC-676
PC-677
PC-678
PC-679
PC-680
PC-681
PC-682
PC-683
PC-684
PC-685
PC-686
PC-687
PC-688
PC-689
PC-690
PC-691
PC-692
PC-693
PC-694
PC-695
PC-696
PC-697
PC-698
PC-699
PC-700
PC-701
PC-702
PC-703
PC-704
PC-705
PC-706
PC-707
PC-708
PC-709
PC-710
PC-711
PC-712
PC-713
PC-714
PC-715
PC-716
PC-717
PC-718
PC-719
PC-720
PC-721
PC-722
PC-723
PC-724
PC-725
PC-726
PC-727
PC-728
PC-729
PC-730
PC-731
PC-732
PC-733
PC-734
PC-735
PC-736
PC-737
PC-738
PC-739
PC-740
PC-741
PC-742
PC-743
PC-744
PC-745
PC-746
PC-747
PC-748
PC-749
PC-750
PC-751
PC-752
PC-753
PC-754
PC-755
PC-756
PC-757
PC-758
PC-759
PC-760
PC-761
PC-762
PC-763
PC-764
PC-765
PC-766
PC-767
PC-768
PC-769
PC-770
PC-771
PC-772
PC-773
PC-774
PC-775
PC-776
PC-777
PC-778
PC-779
PC-780
PC-781
PC-782
PC-783
PC-784
PC-785
PC-786
PC-787
PC-788
PC-789
PC-790
PC-791
PC-792
PC-793
PC-794
PC-795
PC-796
PC-797
PC-798
PC-799
PC-800
PC-801
PC-802
PC-803
PC-804
PC-805
PC-806
PC-807
PC-808
PC-809
PC-810
PC-811
PC-812
PC-813
PC-814
PC-815
PC-816
PC-817
PC-818
PC-819
PC-820
PC-821
PC-822
PC-823
PC-824
PC-825
PC-826
PC-827
PC-828
PC-829
PC-830
PC-831
PC-832
PC-833
PC-834
PC-835
PC-836
PC-837
PC-838
PC-839
PC-840
PC-841
PC-842
PC-843
PC-844
PC-845
PC-846
PC-847
PC-848
PC-849
PC-850
PC-851
PC-852
PC-853
PC-854
PC-855
PC-856
PC-857
PC-858
PC-859
PC-860
PC-861
PC-862
PC-863
PC-864
PC-865
PC-866
PC-867
PC-868
PC-869
PC-870
PC-871
PC-872
PC-873
PC-874
PC-875
PC-876
PC-877
PC-878
PC-879
PC-880
PC-881
PC-882
PC-883
PC-884
PC-885
PC-886
PC-887
PC-888
PC-889
PC-890
PC-891
PC-892
PC-893
PC-894
PC-895
PC-896
PC-897
PC-898
PC-899
PC-900
PC-901
PC-902
PC-903
PC-904
PC-905
PC-906
PC-907
PC-908
PC-909
PC-910
PC-911
PC-912
PC-913
PC-914
PC-915
PC-916
PC-917
PC-918
PC-919
PC-920
PC-921
PC-922
PC-923
PC-924
PC-925
PC-926
PC-927
PC-928
PC-929
PC-930
PC-931
PC-932
PC-933
PC-934
PC-935
PC-936
PC-937
PC-938
PC-939
PC-940
PC-941
PC-942
PC-943
PC-944
PC-945
PC-946
PC-947
PC-948
PC-949
PC-950
PC-951
PC-952
PC-953
PC-954
PC-955
PC-956
PC-957
PC-958
PC-959
PC-960
PC-961
PC-962
PC-963
PC-964
PC-965
PC-966
PC-967
PC-968
PC-969
PC-970
PC-971
PC-972
PC-973
PC-974
PC-975
PC-976
PC-977
PC-978
PC-979
PC-980
PC-981
PC-982
PC-983
PC-984
PC-985
PC-986
PC-987
PC-988
PC-989
PC-990
PC-991
PC-992
PC-993
PC-994
PC-995
PC-996
PC-997
PC-998
PC-999
PC-1000
PC-1001
PC-1002
PC-1003
PC-1004
PC-1005
PC-1006
PC-1007
PC-1008
PC-1009
PC-1010
PC-1011
PC-1012
PC-1013
PC-1014
PC-1015
PC-1016
PC-1017
PC-1018
PC-1019
PC-1020
PC-1021
PC-1022
PC-1023
PC-1024
PC-1025
PC-1026
PC-1027
PC-1028
PC-1029
PC-1030
PC-1031
PC-1032
PC-1033
PC-1034
PC-1035
PC-1036
PC-1037
PC-1038
PC-1039
PC-1040
PC-1041
PC-1042
PC-1043
PC-1044
PC-1045
PC-1046
PC-1047
PC-1048
PC-1049
PC-1050
PC-1051
PC-1052
PC-1053
PC-1054
PC-1055
PC-1056
PC-1057
PC-1058
PC-1059
PC-1060
PC-1061
PC-1062
PC-1063
PC-1064
PC-1065
PC-1066
PC-1067
PC-1068
PC-1069
PC-1070
PC-1071
PC-1072
PC-1073
PC-1074
PC-1075
PC-1076
PC-1077
PC-1078
PC-1079
PC-1080
PC-1081
PC-1082
PC-1083
PC-1084
PC-1085
PC-1086
PC-1087
PC-1088
PC-1089
PC-1090
PC-1091
PC-1092
PC-1093
PC-1094
PC-1095
PC-1096
PC-1097
PC-1098
PC-1099
PC-1100
PC-1101
PC-1102
PC-1103
PC-1104
PC-1105
PC-1106
PC-1107
PC-1108
PC-1109
PC-1110
PC-1111
PC-1112
PC-1113
PC-1114
PC-1115
PC-1116
PC-1117
PC-1118
PC-1119
PC-1120
PC-1121
PC-1122
PC-1123
PC-1124
PC-1125
PC-1126
PC-1127
PC-1128
PC-1129
PC-1130
PC-1131
PC-1132
PC-1133
PC-1134
PC-1135
PC-1136
PC-1137
PC-1138
PC-1139
PC-1140
PC-1141
PC-1142
PC-1143
PC-1144
PC-1145
PC-1146
PC-1147
PC-1148
PC-1149
PC-1150
PC-1151
PC-1152
PC-1153
PC-1154
PC-1155
PC-1156
PC-1157
PC-1158
PC-1159
PC-1160
PC-1161
PC-1162
PC-1163
PC-1164
PC-1165
PC-1166
PC-1167
PC-1168
PC-1169
PC-1170
PC-1171
PC-1172
PC-1173
PC-1174
PC-1175
PC-1176
PC-1177
PC-1178
PC-1179
PC-1180
PC-1181
PC-1182
PC-1183
PC-1184
PC-1185
PC-1186
PC-1187
PC-1188
PC-1189
PC-1190
PC-1191
PC-1192
PC-1193
PC-1194
PC-1195
PC-1196
PC-1197
PC-1198
PC-1199
PC-1200
PC-1201
PC-1202
PC-1203
PC-1204
PC-1205
PC-1206
PC-1207
PC-1208
PC-1209
PC-1210
PC-1211
PC-1212
PC-1213
PC-1214
PC-1215
PC-1216
PC-1217
PC-1218
PC-1219
PC-1220
PC-1221
PC-1222
PC-1223
PC-1224
PC-1225
PC-1226
PC-1227
PC-1228
PC-1229
PC-1230
PC-1231
PC-1232
PC-1233
PC-1234
PC-1235
PC-1236
PC-1237
PC-1238
PC-1239
PC-1240
PC-1241
PC-1242
PC-1243
PC-1244
PC-1245
PC-1246
PC-1247
PC-1248
PC-1249
PC-1250
PC-1251
PC-1252
PC-1253
PC-1254
PC-1255
PC-1256
PC-1257
PC-1258
PC-1259
PC-1260
PC-1261
PC-1262
PC-1263
PC-1264
PC-1265
PC-1266
PC-1267
PC-1268
PC-1269
PC-1270
PC-1271
PC-1272
PC-1273
PC-1274
PC-1275
PC-1276
PC-1277
PC-1278
PC-1279
PC-1280
PC-1281
PC-1282
PC-1283
PC-1284
PC-1285
PC-1286
PC-1287
PC-1288
PC-1289
PC-1290
PC-1291
PC-1292
PC-1293
PC-1294
PC-1295
PC-1296
PC-1297
PC-1298
PC-1299
PC-1300
PC-1301
PC-1302
PC-1303
PC-1304
PC-1305
PC-1306
PC-1307
PC-1308
PC-1309
PC-1310
PC-1311
PC-1312
PC-1313
PC-1314
PC-1315
PC-1316
PC-1317
PC-1318
PC-1319
PC-1320
PC-1321
PC-1322
PC-1323
PC-1324
PC-1325
PC-1326
PC-1327
PC-1328
PC-1329
PC-1330
PC-1331
PC-1332
PC-1333
PC-1334
PC-1335
PC-1336
PC-1337
PC-1338
PC-1339
PC-1340
PC-1341
PC-1342
PC-1343
PC-1344
PC-1345
PC-1346
PC-1347
PC-1348
PC-1349
PC-1350
PC-1351
PC-1352
PC-1353
PC-1354
PC-1355
PC-1356
PC-1357
PC-1358
PC-1359
PC-1360
PC-1361
PC-1362
PC-1363
PC-1364
PC-1365
PC-1366
PC-1367
PC-1368
PC-1369
PC-1370
PC-1371
PC-1372
PC-1373
PC-1374
PC-1375
PC-1376
PC-1377
PC-1378
PC-1379
PC-1380
PC-1381
PC-1382
PC-1383
PC-1384
PC-1385
PC-1386
PC-1387
PC-1388
PC-1389
PC-1390
PC-1391
PC-1392
PC-1393
PC-1394
PC-1395
PC-1396
PC-1397
PC-1398
PC-1399
PC-1400
PC-1401
PC-1402
PC-1403
PC-1404
PC-1405
PC-1406
PC-1407
PC-1408
PC-1409
PC-1410
PC-1411
PC-1412
PC-1413
PC-1414
PC-1415
PC-1416
PC-1417
PC-1418
PC-1419
PC-1420
PC-1421
PC-1422
PC-1423
PC-1424
PC-1425
PC-1426
PC-1427
PC-1428
PC-1429
PC-1430
PC-1431
PC-1432
PC-1433
PC-1434
PC-1435
PC-1436
PC-1437
PC-1438
PC-1439
PC-1440
PC-1441
PC-1442
PC-1443
PC-1444
PC-1445
PC-1446
PC-1447
PC-1448
PC-1449
PC-1450
PC-1451
PC-1452
PC-1453
PC-1454
PC-1455
PC-1456
PC-1457
PC-1458
PC-1459
PC-1460
PC-1461
PC-1462
PC-1463
PC-1464
PC-1465
PC-1466
PC-1467
PC-1468
PC-1469
PC-1470
PC-1471
PC-1472
PC-1473
PC-1474
PC-1475
PC-1476
PC-1477
PC-1478
PC-1479
PC-1480
PC-1481
PC-1482
PC-1483
PC-1484
PC-1485
PC-1486
PC-1487
PC-1488
PC-1489
PC-1490
PC-1491
PC-1492
PC-1493
PC-1494
PC-1495
PC-1496
PC-1497
PC-1498
PC-1499
PC-1500
PC-1501
PC-1502
PC-1503
PC-1504
PC-1505
PC-1506
PC-1507
PC-1508
PC-1509
PC-1510
PC-1511
PC-1512
PC-1513
PC-1514
PC-1515
PC-1516
PC-1517
PC-1518
PC-1519
PC-1520
PC-1521
PC-1522
PC-1523
PC-1524
PC-1525
PC-1526
PC-1527
PC-1528
PC-1529
PC-1530
PC-1531
PC-1532
PC-1533
PC-1534
PC-1535
PC-1536
PC-1537
PC-1538
PC-1539
PC-1540
PC-1541
PC-1542
PC-1543
PC-1544
PC-1545
PC-1546
PC-1547
PC-1548
PC-1549
PC-1550
PC-1551
PC-1552
PC-1553
PC-1554
PC-1555
PC-1556
PC-1557
PC-1558
PC-1559
PC-1560
PC-1561
PC-1562
PC-1563
PC-1564
PC-1565
PC-1566
PC-1567
PC-1568
PC-1569
PC-1570
PC-1571
PC-1572
PC-1573
PC-1574
PC-1575
PC-1576
PC-1577
PC-1578
PC-1579
PC-1580
PC-1581
PC-1582
PC-1583
PC-1584
PC-1585
PC-1586
PC-1587
PC-1588
PC-1589
PC-1590
PC-1591
PC-1592
PC-1593
PC-1594
PC-1595
PC-1596
PC-1597
PC-1598
PC-1599
PC-1600
PC-1601
PC-1602
PC-1603
PC-1604
PC-1605
PC-1606
PC-1607
PC-1608
PC-1609
PC-1610
PC-1611
PC-1612
PC-1613
PC-1614
PC-1615
PC-1616
PC-1617
PC-1618
PC-1619
PC-1620
PC-1621
PC-1622
PC-1623
PC-1624
PC-1625
PC-1626
PC-1627
PC-1628
PC-1629
PC-1630
PC-1631
PC-1632
PC-1633
PC-1634
PC-1635
PC-1636
PC-1637
PC-1638
PC-1639
PC-1640
PC-1641
PC-1642
PC-1643
PC-1644
PC-1645
PC-1646
PC-1647
PC-1648
PC-1649
PC-1650
PC-1651
PC-1652
PC-1653
PC-1654
PC-1655
PC-16


PRESIDENT

3A

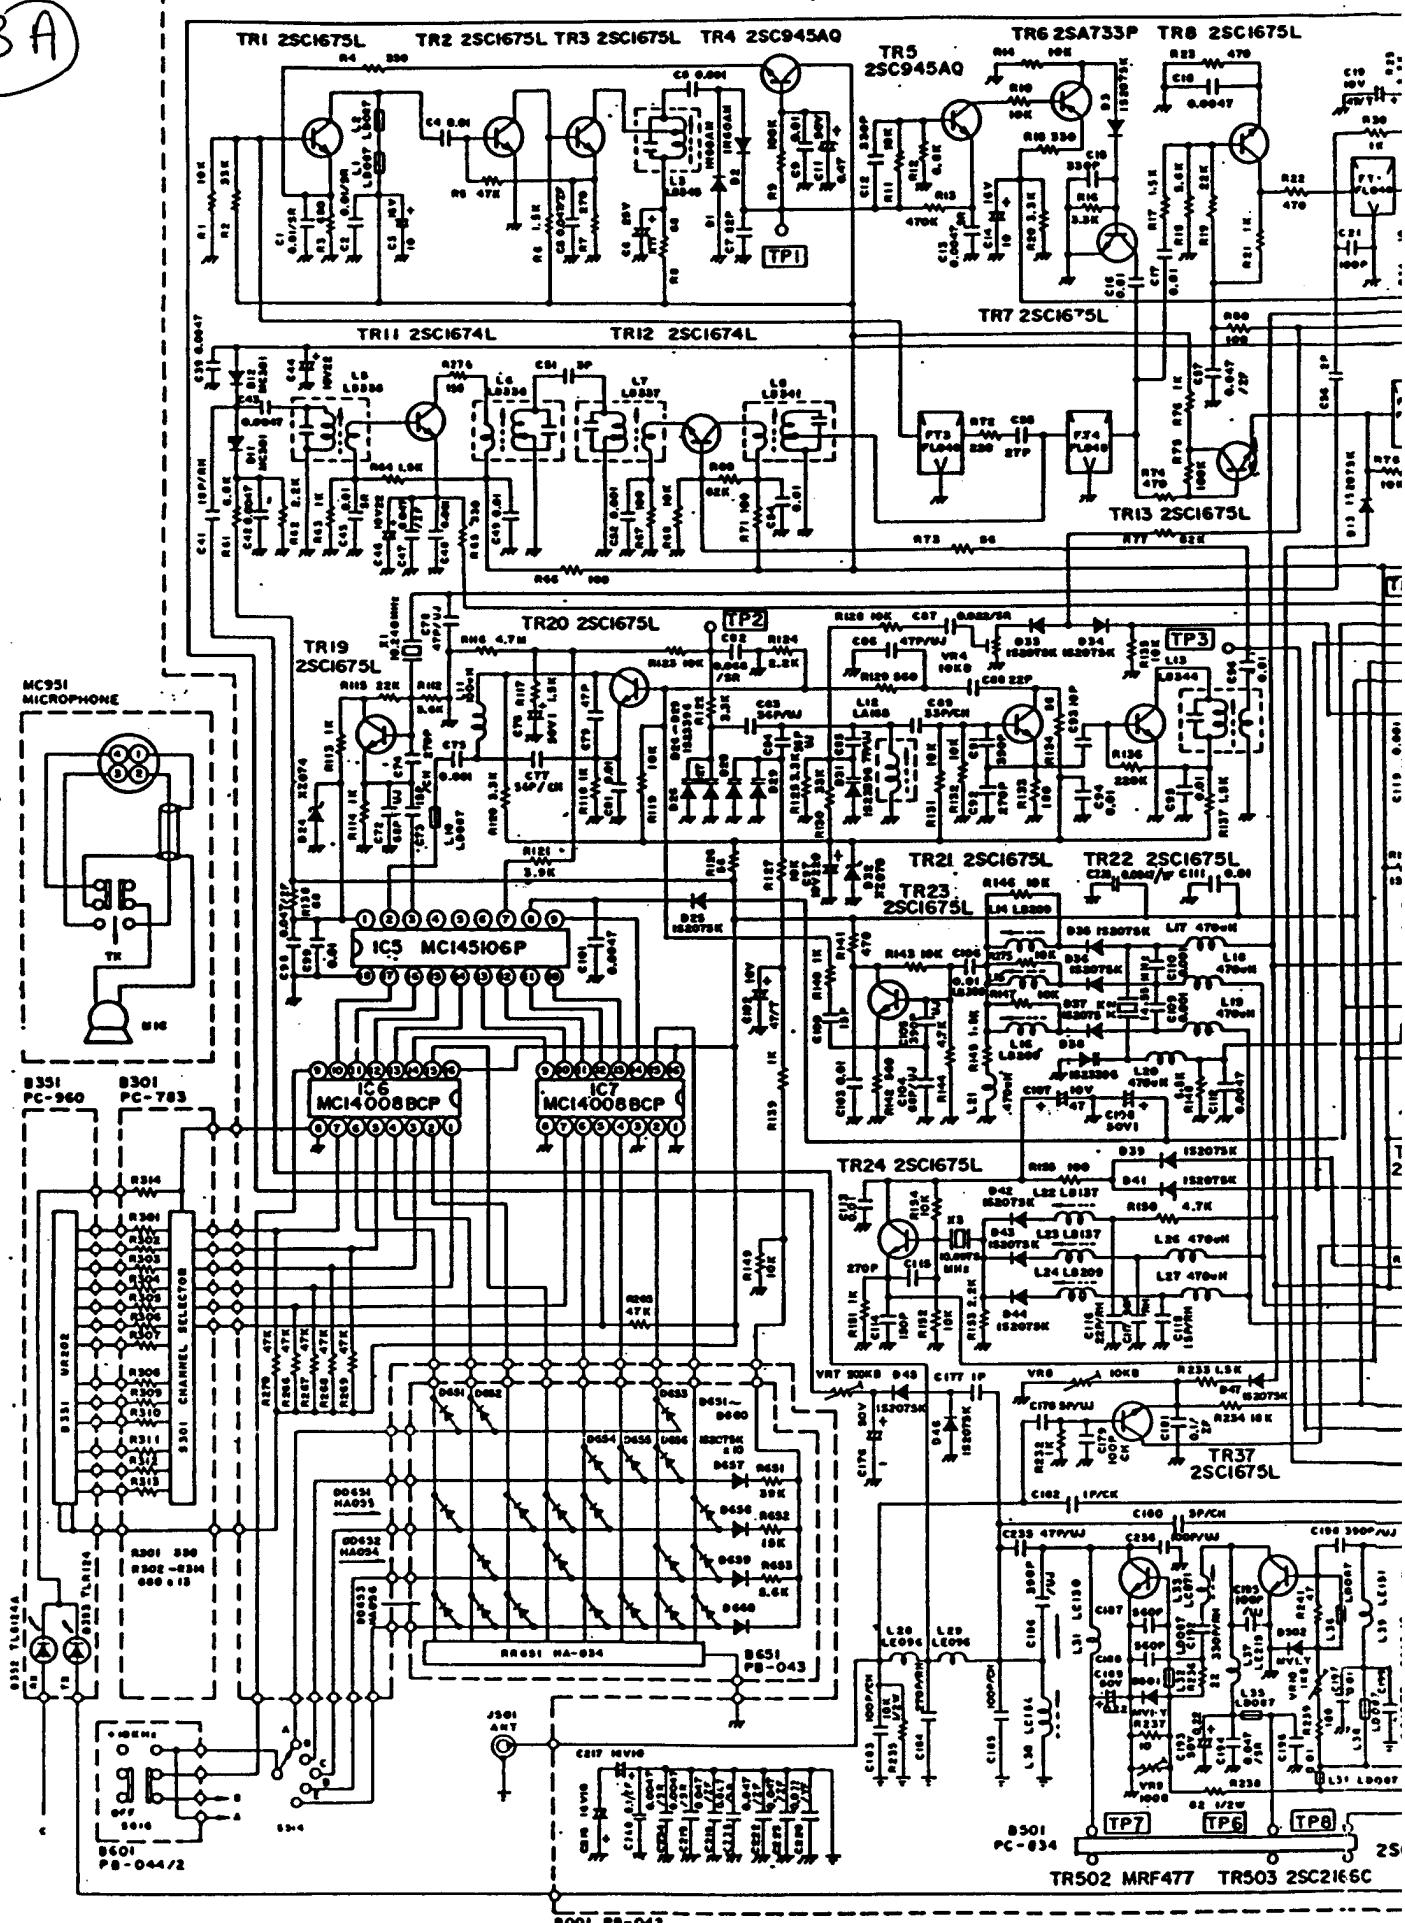

JACKSON N

(3B)

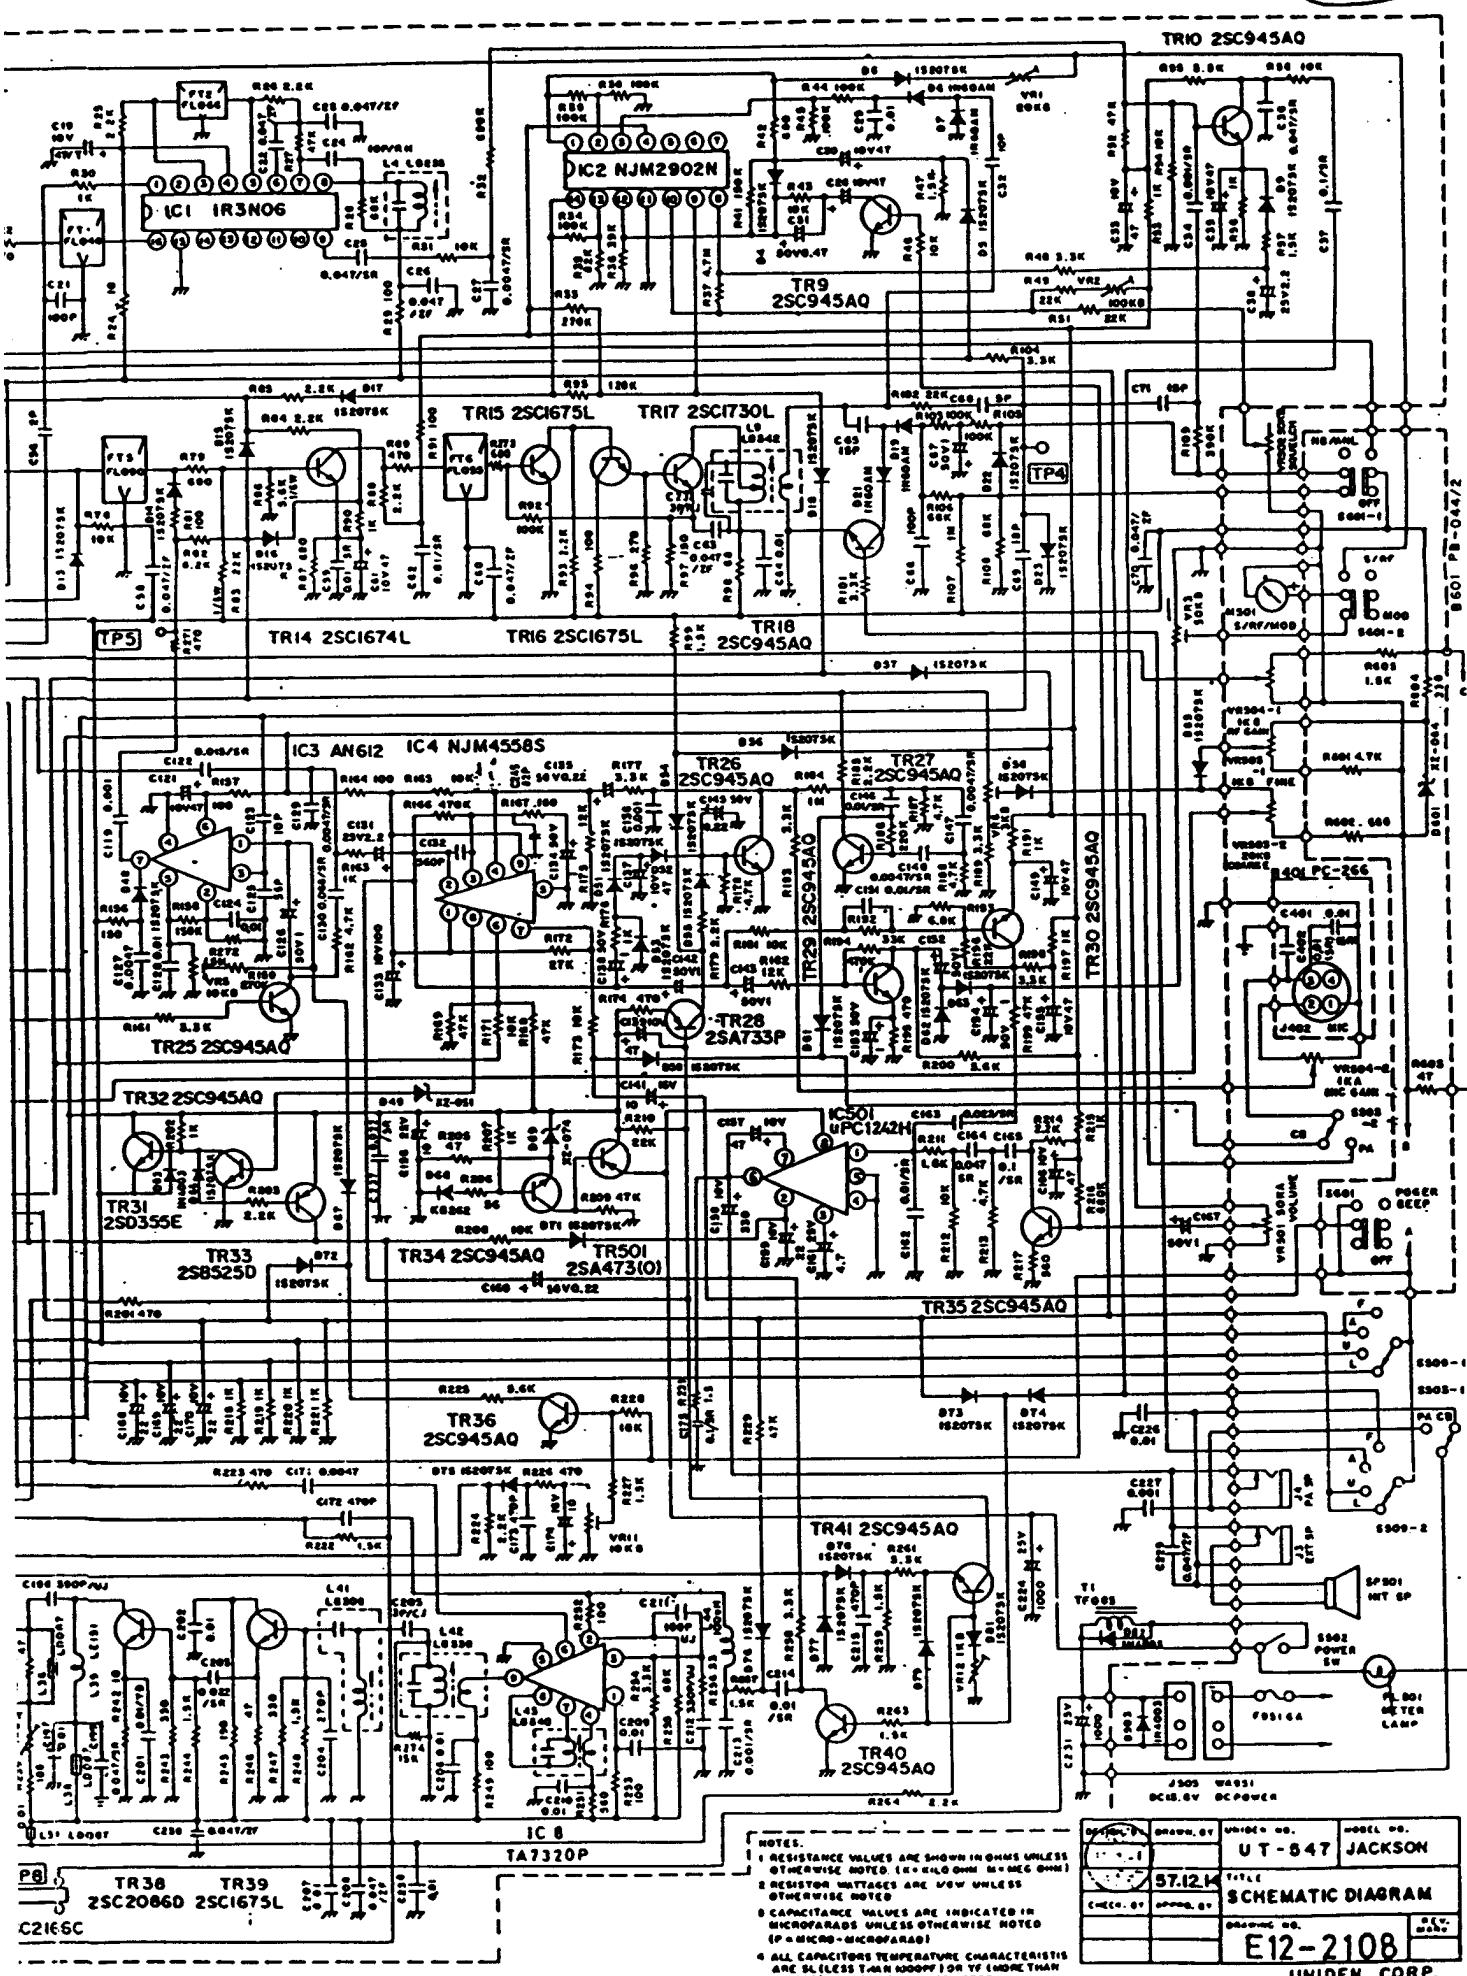

DESIGNER	DRAWN BY	UNIDEN CO.	MODEL NO.
P8		U T - 547	JACKSON
TR38 TR39 ZSC20860 2SC1675L C2165C	57.12.1		TITLE
			SCHEMATIC DIAGRAM
			E12-2108
			UNIDEN CORP.

HTC - 007

LISTE PIECES DETACHEES JACKSON

LISTE PIECES DETACHEES JACKSON

1

CODE	DESIGNATION	QTE/MOD.	CODE	DESIGNATION	QTE/MOD.
BC003	BOBINE LD-087	8	DC008	DIODE 1N4003	2
BC004	BOBINE LE-096	2	DC007	DIODE MV-1Y	2
BC005	BOBINE LE-151	1	DC010	DIODE ZENER XZ-051	1
BC008	BOBINE LE-215	1	DC011	DIODE ZENER XZ-070	1
BC009	SELF LZ-016 100UH	2	DC012	DIODE ZENER XZ-074	2
BC010	SELF LZ-016 470UH	7	DC013	DIODE ZENER XZ-064	1
BC011	TRANSFORMATEUR TF-083	1	DC014	DIODE HA-034	1
BC015	BOBINE LC-071	2	DC015	DIODE HA-054	1
BC016	BOBINE LC-130	1	DC016	DIODE HA-055	1
BR003	BOBINE LA-165	1	DC017	DIODE HA-056	1
BR015	BOBINE LB-137	2	DV002	DIODE 1S2339G	6
BR016	BOBINE LB-209	4	DV003	DIODE KB-262	1
BR022	BOBINE LB-233	1	HM001	MICROPHONE MK-221	1
BR023	BOBINE LB-309	1	HP001	HAUT-PARLEUR SP-053	1
BR024	BOBINE LB-335	1	IL001	CIRCUIT INTEGRÉ MC1400BBCP	2
BR025	BOBINE LB-336	1	IP001	CIRCUIT INTEGRÉ UPC1182H	1
BR026	BOBINE LB-337	1	IR001	CIRCUIT INTEGRÉ AN612	1
BR027	BOBINE LB-339	1	IR005	CIRCUIT INTEGRÉ NJM2902N	1
BR028	BOBINE LB-340	1	IR006	CIRCUIT INTEGRÉ NJM4558S	1
BR029	BOBINE LB-341	1	IR007	CIRCUIT INTEGRÉ TA7320P	1
BR030	BOBINE LB-342	1	IR008	CIRCUIT INTEGRÉ IR3N06	1
BR031	BOBINE LB-343	1	IS002	CIRCUIT INTEGRÉ MC145106P	1
BR032	BOBINE LB-344	1	JX001	JACK JK-089	2
DC001	DIODE 1N60 AM	6	JX002	JACK JK-052	1
DC005	DIODE 1S2075K	63	JX003	JACK JK-068	1
DC007	DIODE MC-301	2	JX004	JACK JK-206	1

LISTE PIECES DETACHEES JACKSON

LISTE PIECES DETACHEES JACKSON

2

CODE	DESIGNATION	QTE/MOD.	CODE	DESIGNATION	QTE/MOD.
JX005	JACK JK-087	1	TX002	TRANSISTOR 2SC945A-Q	16
JX006	JACK JK-075	1	TX003	TRANSISTOR 2SC1674-L	3
DA001	AFFICHEUR UR-202D	1	TX004	TRANSISTOR 2SC1675-L	16
OX001	LED TLR-124 RED	1	TX005	TRANSISTOR 2SC1730-L	1
OX002	DIODE / LED TLG-124A GREEN	1	TX009	TRANSISTOR 2SB525-D	1
PF001	FILTRE FL-04B SFE10.7MS2-M	3	TX010	TRANSISTOR 2SC2086-D	1
PF002	FILTRE FL-066	1	TX011	TRANSISTOR 2SD355-E	1
PF004	FILTRE FL-055 10M-7A1	1	VM002	VU-METRE MT-221	1
PF005	FILTRE FL-090 UMF-058	1			
PQ002	QUARTZ 10.6975	1			
PQ005	QUARTZ 10.240 QX-074	1			
PQ006	QUARTZ 14.550	1			
QX002	FACE AVANT JACKSON	1			
RV002	POTENTIOMETRE RV-320 50KA	1			
RV003	POTENTIOMETRE RV-447 50KB	1			
RV004	POTENTIOMETRE RV-485 1KB.1KA	1			
RV005	POTENTIOMETRE RV-560 20KB.1KB	1			
SS001	COMMUTATEUR SR-208	1			
SX001	FUSIBLE FS-014 6A	1			
SX002	COMMUTATEUR SR-187	1			
SX004	COMMUTATEUR SW-317	1			
SX005	COMMUTATEUR SR-342	1			
TB001	TRANSISTOR 2SA473-0	1			
TH001	TRANSISTOR 2SC2166-C	1			
TH003	TRANSISTOR MRF-477	1			
TX001	TRANSISTOR 2SA733-P	2			