### INSTALLATION AND OPERATION

The receiver has been carefully calibrated, aligned and thoroughly tested and the only adjustment that may be necessary before putting the receiver into operation is to the mains input voltage tapping. The selector panel on the top of the mains transformer (easily accessible when the receiver lid is open) is normally connected for 240 volt operation. For other input voltages, reference should be made to the instruction label, attached to the top of this transformer.

Unless specially ordered, the transformer is unsuitable for 25 cycle mains. D.C. mains are entirely unsuitable, and if connected will cause serious damage to the receiver.

A loudspeaker — preferably the Cat. No. 814 — having an impedance of 2.5/3 ohms is connected to the terminals marked "L.S." at the rear or, alternatively, a pair of telephones plugged into the jack on the front panel. The brilliance of the dial lights is adjustable by manipulation of the knob at the rear.

At the rear also are terminals, suitably marked, for feeding the output into a 600 ohm line.

#### AERIAL CONNECTIONS.

The input impedance at the aerial terminals is nominally 70/80 ohms. Two coaxial sockets, connected in parallel, are fitted at the rear to take the feeder coming in from the aerial system.

### RECEPTION OF CW TELEGRAPHY.

The panel controls should be set as follows:-

AGC .. .. " off "

Crystal Phasing Knob White mark at "off."

BFO Pitch Control .. White mark to one side of centre ("on").

RF Gain ... Adjust as necessary. AF Gain ... Adjust as necessary.

Selectivity .. Maximum or intermediate.

The settings of the controls depend on a number of factors including the strength of the incoming signals, amount of interference present and the efficiency of the aerial. If the latter is poor, it will be advisable to use maximum RF gain, but often the RF gain can be reduced with advantage. It should always be reduced when signals are strong.

The BFO on/off switch forms part of the pitch control capacitor. The latter permits a swing of about 3,000 cycles each side of zero beat and will normally be set to give a pitch of 1,000 c.p.s. or near. Careful handling of this control will sometimes enable a desired signal to be separated from an interfering signal and one side of zero beat may be better than the other side.

#### USE OF CRYSTAL FILTER.

It is advantageous to employ a high degree of selectivity because the noise output from the receiver is partly dependent on the IF bandwidth and the narrower this is made, the less the noise for the same amount of gain. It will therefore generally be desirable when receiving CW telegraphy, to operate with selectivity at maximum.

A further increase in selectivity is obtained when the crystal filter is switched in. Moving the phasing knob away from the indicated "off" position brings the crystal into circuit. The slope of the selectivity curve (with crystal in) can be varied by movement of the phasing control to give extremely high attenuation one side or the other of the centre frequency. This feature is invaluable when interfering signals are objectionable.

#### AUDIO FILTER.

The highly efficient tuned audio filter will be found very useful when receiving telegraphic signals. It is tuned to approximately 1,000 cycles, has steep slopes giving a pass-band of about 100 cycles at 6 db points, and has a low insertion loss at 1,000 cycles. The switch on the front panel brings the filter into operation, the effect being to reduce drastically both background noise and interfering signals whilst leaving the desired signal clear and sharp.

RECEPTION OF TELEPHONY.

The panel controls should be set as follows:

AGC .. .. " on."

BFO .. "off" (mark against "off" position).

RF Gain ... maximum.

Crystal Phasing Knob Mark against "off" position.

AF Gain ... adjusted to give requisite volume.

AF Filter .. .. "off."

For best possible audio quality, the variable selectivity control should be set at minimum. When heterodyne interference is experienced, the selectivity should be increased by moving the switch to one of the intermediate positions. A certain amount of gain compensation is automatically provided with movement of the switch. It may be mentioned that a very strong signal may overload the first stage of the receiver, necessitating a reduction of RF gain.

The tuning scales are calibrated directly in frequency to a high degree of accuracy and the flywheel controlled drive permits fine tuning on all ranges.

The mechanical bandspread device assists in the logging of particular stations. One complete revolution of the rotating scale (at the top of the dial) corresponds to a movement of the main pointer over one marked division of the lowest scale on the main dial, the length of the latter being opened out to the equivalent of 360 inches. The settings of a given station can be recorded for future use.

USE OF SIGNAL STRENGTH METER.

The Signal Strength Meter comes into operation only with the selectivity control in the maximum position, where the peaked response assists in tuning a signal accurately. The sensitive meter movement is protected by one half of a double diode valve in series with it, to prevent current flowing in the reverse direction. The RF gain should be fully advanced when using the "S" Meter.

To adjust the meter initially, the aerial and earth terminals should temporarily be shorted and the needle of the instrument made to coincide with zero by movement of the rear adjuster.

CRYSTAL CALIBRATOR.

A crystal calibrator is fitted and gives check points (oscillator beats) 500 kc/s apart, audible over the entire frequency range. The accuracy of the oscillator has been checked during factory alignment but a small trimmer is provided for adjustment, should this be found necessary at any time.

The calibrator is brought into use by pressing the switch on the front panel, and a check can then be made against any calibration mark which is an exact multiple of 500 kc/s. Incoming signals are muted to avoid confusion.

Any error in calibration is corrected by rotation of the small knurled knob on the right hand side above the dial, until the hair-line on the cursor agrees exactly with the appropriate mark on the scale.

AUDIO INPUT TERMINALS.

The two terminals situated below the "L.S." terminals at the rear are useful for feeding in any external audio voltage when it is desired to use only the AF section of the receiver. The input impedance is approximately 100,000 ohms.

I.F. OUTPUT.

At the rear of the receiver is fitted a coaxial socket from which an output at the intermediate frequency of 450 kc/s. may be taken. The socket connects to a cathode follower stage and the output impedance is 70 to 80 ohms.

OPERATION WITHOUT MAINS.

Facilities are provided for operating the receiver from external sources of power, when desired. At the rear are plug and socket connections, details being provided in the circuit diagram. The requirements are 6 or 6.3 volts at 5 amperes and 250 volts at 120 mA.

### GENERAL SERVICING

The "730/4" receiver operates from A.C. mains of 40/60 cycles or external power supplies, the consumption being approximately 80 watts. The fuse is in series with the A.C. supply and is rated at 1 ampere standard type or 750 mA Magnickel type.

Two types of lamps are fitted behind the scale. Those for general illumination are small bayonet cap types, rated at 6.5 volts 0.3 amperes. To change a lamp it is only necessary to press the sides of the holder (accessible when the lid is lifted) and pull the lamp out.

Miniature lamps are used to indicate the range selected. These are fitted to an insulating strip, which can be drawn away complete after removing the knurled nut at the top of the strip. The cabinet has to be removed for this operation.

Should the performance fall off or perhaps fail completely, it will be well in the first place to inspect the valves for the normal heater glow. Where a metal screening can is fitted to a valve, it is easily removable with a twist and a pull. The VR150/30 valve normally exhibits a violet glow.

If it becomes necessary to obtain access to the interior, the cabinet can be completely removed after withdrawal of the four large screws at the rear. A check should be made against the operating voltages given in the table and any serious discrepancy will indicate at which stage in the circuit a fault has developed.

RE-ALIGNMENT.

The tuned circuits in the "730/4" receiver will hold their proper alignment over a long period of time and it is inadvisable to make adjustments unless the need thereof is justified. The alignment of a receiver of this type is a skilled operation and it is most unwise to judge the effect of adjustments by ear alone. It is therefore assumed test instruments are available. Essential items are:— A Signal Generator covering from 450 kc/s to 32 Mc/s, provided with internal audio modulation (30%) and with a calibrated attenuator; an Audio Output Meter, scaled in milliwats and decibels and adjustable to match the receiver output impedance of 2.5 ohms. Trimming should be carried out with a non-metallic tool such as the Eddystone Cat. No. 122T, which is supplied with the receiver.

IF AMPLIFIER.

The alignment of a modern variable selectivity IF amplifier as in the "730/4" requires the use of a frequency modulated signal generator ("Wobbulator") and an oscilloscope, presenting a visual display to the operator.

It is unlikely that a fault will develop in one of the IF transformers and the adjustments of these should not be disturbed unless absolutely necessary. For check purposes, however, the following information and sensitivity figures may occasionally be useful. To obviate unsoldering the grid leads to the IF valves, the figures have been taken with these wires connected and are therefore not strictly true ones. Nevertheless, they are quite adequate for comparison purposes. The intermediate frequency is 450 kc/s ( $\pm 1.5$  kc/s = crystal tolerance).

The following conditions apply when taking measurements:

Wavechange Switch Range 5. AGC and NL off.

Receiver Pitch control knob at "off".

Crystal phasing knob at "off." Selectivity maximum.

RF Gain maximum.

Signal Generator 30% Modulation. Direct output.

Output Meter across and matched to speaker terminals.

Input for 50 mW output (approximate):

Between grid V6 and chassis 11 millivolts. Between grid V5 and chassis 220 microvolts. To measure the overall sensitivity of the IF amplifier at the signal grid of the frequency changer (V3), it will be necessary to unsolder a lead in the frequency changer compartment of the coil box. This lead is identified in Fig. 4 by an arrow and cross. The Signal Generator leads are connected between this lead and chassis. The sensitivity at this point should be in the region of 20 microvolts.

#### BFO ADJUSTMENT.

With the BFO pitch control knob in the "off" position, the modulated signal (at IF) applied to the receiver should be tuned in accurately with the aid of the "S" Meter, selectivity remaining at maximum. Then the modulation is switched off, the pitch control knob adjusted to bring the white mark to the top (12 o'clock), and if necessary, the core in the BFO unit (position is indicated in Fig. 4) adjusted to bring about zero beat with the applied signal.

## ALIGNMENT OF RF SECTION.

All receiver controls are left as for IF check. The dummy aerial of the signal generator is connected between aerial and earth at the rear of the coil box. It will be found helpful to connect the speaker as well as the Output Meter for the first stage of the following procedure, which is calibration. For this, a 1,000/100 kc/s crystal oscillator, with harmonics usable up to 30 Mc/s, is essential, since the desired maximum calibration error on the dial of the receiver is 0.5%. To allow for subsequent calibration adjustments against the internal oscillator, care should be taken to ensure the vernier pointer adjuster is set at the mid point of its travel.

The location of the various trimmers and cores are shown in Fig. 4. Connect the crystal oscillator in shunt with the dummy aerial, set the pitch control with white mark at the top, and, using the RF gain only as volume control, check on Range 1. Should the 28 Mc/s and 14 Mc/s harmonics be appreciably off their marks when tuned to zero beat, proceed to correct the 14 Mc/s harmonic by means of the Range 1 oscillator coil CORE. The 28 Mc/s harmonic is corrected by means of the TRIMMER. With these two points accurately fixed, the remainder of the calibrations will automatically conform to the desired 0.5% accuracy. The same procedure is used on all other ranges, the two setting points on each range being as follows:

Range 1 — 28 Mc/s and 14 Mc/s.

Range 1 — 28 Mc/s and 14 Mc/s.
Range 2 — 12 Mc/s and 6 Mc/s.
Range 3 — 5.6 Mc/s and 2.5 Mc/s.
Range 4 — 2.5 Mc/s and 1.2 Mc/s.
Range 5 — 1,000 kc/s and 500 kc/s.

## ALIGNMENT OF RF. AND MIXER SECTIONS.

Remove the crystal oscillator leads and use only the signal generator with the attenuator set to give about 10 microvolts. Switch off BFO. Then proceed as follows:

Inject a 13·3 Mc/s modulated signal into the receiver and tune in on Range 1 for maximum deflection on the output meter, using the RF gain to keep the needle on the scale. Now proceed to adjust the CORES only of the two RF coils and the one FC coil for highest output as indicated on the output meter. Next, inject a 28 Mc/s signal and peak this by means of the three appropriate trimmers. Repeat the whole procedure until no improvement is possible. Use the same procedure on all ranges. The high and low frequency alignment points on each range are as follows:

Range	Trimmer Frequency	Core Frequency
1	28 Mc/s	13⋅3 Mc/s
2	12 Mc/s	6-0 Mc/s
3	5.4 Mc/s	2.6 Mc/s
4	2-3 Mc/s	1-2 Mc/s
5	1,000 kc/s	520 kc/s

Always adjust the TRIMMERS at the high frequency ends of the bands and the CORES at the low frequency ends. This hard and fast rule applies in the alignment of all the signal frequency and oscillator coils.

Sole Manufacturers: STRATTON & CO. LTD., BIRMINGHAM 31

Cables: Stratnoid, Birmingham

October 1957

## CIRCUIT No. BP. 934. VOLTAGE VALUES.

The voltages are between the point indicated and the chassis. Set the receiver at 1,000 kc/s on Range 5 with the aerial shorted out, R.F. control set at maximum, A.F. control set at minimum. B.F.O. and Calibrator on only for D- and B- respectively. Two sets of values are given using different meters as shown.

It will be evident that the actual voltage indicated depends on the meter employed. A tolerance of plus or minus 5% should be allowed on the values given.

e	of plus or minus :	5% should i	be allow	ea on	the valu	es given.			
	OINT.	WESTO	N (20,00	00 ohm	s/volt.)		A <sup>1</sup>	VO (Model 40	0).
	A.		218 90					215 85	
	B. C. D. E. F. G. H.		1					1	
	D.		218					215	
	E.		95					88	
	F.		1					1	
	G.		226					224 100	
	н.		100 1					1	
	J. K.		100					92	
	L.		218					216	
	M.		96					90	
	N.		1					1	
	Ο.		218					216 85	
	P.		90 1					1	
	Q. R. S. T.		14					14	
	S.		80					21	
	T.		80					32	
	U.		225					206	
	٧.		4.2					1·5 2	
	w.		4 242					246	
	X. Y		235					241	
	X. Y. Z. A.– B.–		242					246	
	Ā.–		10					9.4	
	B		25					15	
	C		160					150	
	D		20	C				7 252 A.C.	
	D E F		255 A. 275	.с.				272	
	G		148					148	
	H	- 15 (10kg)	140					125	
	J		90					50	
			VA	LVES.					
	VALVE No.		11.5	TYPE				SERIES	
	1.			6BA6				B7G	
	2.			6BA6				B7G	
	2. 3.			6BE6				B7G	
	4.			6AM6	(8D3)			B7G B7G	
	5.			6BA6 6BA6				B7G B7G	
	6. 7.			6AL5				B7G	
	8.		1	12AU7				B9A (Nova	d)
	9.			6AL5				B7G	
	10.			6AM6	(8D3)			B7G	
	11. 12.			6AU6 6BA6				B7G B7G	
	13.			5Z4G				Octal	
	14.			VR150	/30			Octal	
	15.				(7D9)			B7G	

## CIRCUIT No. BP. 934.

## COMPONENT VALUES.

## RESISTORS.

R1.       12 ohms       R42.       47 Megohm       R43.       6,800 ohms         R2.       47 Megohm       R44.       2,200 ohms         R4.       68 ohms       R45.       1 Megohm         R5.       33,000 ohms       1W       R46.       1 Megohm         R6.       1,000 ohms       R47.       47 Megohm         R7.       150 ohms       R48.       680 ohms         R8.       12 ohms       R49.       47,000 ohms         R9.       47 Megohm       R50.       4,700 ohms         R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms       R14.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R55.       1,000 ohms       R56.       10,000 ohms         R15.       150 ohms       R55.       1,000 ohms       R57.       1,000 ohms         R17.       12 ohms       R57.       1,000 ohms       R57.       1,000 ohms         R18.       12 ohms       R59.       10,000 ohms       P0       R00       5,000 ohms       P0       P0						
R3. 47 Megohm R4. 68 ohms R4. 68 ohms R5. 33,000 ohms 1W R6. 1,000 ohms R7. 150 ohms R8. 12 ohms R9. 47 Megohm R11. 68 ohms R12. 33,000 ohms R14. 1,000 ohms R15. 1 Megohm R16. 1,000 ohms R17. 1 Megohm R17. 1 Megohm R18. 1 Megohm R19. 47 Megohm R19. 47 Megohm R19. 1 Megohm R20. 47 Megohm R21. 150 ohms R24. 1,000 ohms R24. 1,000 ohms R25. 2,000 ohms R26. 1,000 ohms R27. 15,000 ohms R28. 22,000 ohms R29. 10,000 ohms R20. 47 Megohm R21. 150 ohms R22. 47 Megohm R23. 15,000 ohms R24. 1,000 ohms R25. 33,000 ohms R26. 1,000 ohms R27. 15,000 ohms R28. 47 Megohm R29. 820 ohms R29. 820 ohms R29. 820 ohms R20. 47 Megohm R21. 15,000 ohms R22. 47 Megohm R23. 15,000 ohms R24. 1,000 ohms R25. 33,000 ohms R26. 1,000 ohms R27. 15,000 ohms R28. 47 Megohm R29. 820 ohms R29. 820 ohms R29. 820 ohms R20. 47 Megohm R21. 1 Megohm R22. 47 Megohm R23. 1 Megohm R24. 1,000 ohms R25. 33,000 ohms R26. 1,000 ohms R27. 15,000 ohms R28. 47 Megohm R29. 820 ohms R30. 3,300 ohms R40. 4,700 ohms R41. 1 Megohm R42. 1 Megohm R43. 1 Megohm R44. 1 Megohm R45. 1 Megohm R46. 2,700 ohms R47. 4,700 ohms R48. 68 ohms R49. 27 Megohm R40. 5 ohms R40. 1 Megohm R40. 5	R1.	12 ohms				
R3. 47 Megohm R4. 68 ohms R4. 68 ohms R5. 33,000 ohms R6. 1,000 ohms R7. 150 ohms R8. 12 ohms R9. 47 Megohm R11. 68 ohms R12. 33,000 ohms R13. 1,000 ohms R14. 1,000 ohms R15. 1 Megohm R16. 1,000 ohms R17. 150 ohms R18. 12 ohms R19. 47 Megohm R19. 150 ohms R19. 17 Megohm R19. 17 Megohm R19. 17 Megohm R19. 18 Megohm R19. 19 Ohms R19. 19 Ohms R19. 10 Megohm R19. 10 Noon ohms R19. 10 Noon ohms R19. 10 Megohm R20. 47 Megohm R21. 150 ohms R22. 47 Megohm R23. 15,000 ohms R24. 1,000 ohms R24. 1,000 ohms R25. 33,000 ohms R26. 1,000 ohms R27. 15,000 ohms R28. 47 Megohm R29. 820 ohms R29. 820 ohms R30. 3,300 ohms R31. 1,200 ohms R32. 48 Ohms R33. 1 Megohm R33. 1 Megohm R34. 68 ohms R35. 1 Megohm R35. 1 Megohm R36. 1 Megohm R37. 10,000 ohms R37. 10,000 ohms R38. 22,000 ohms R39. 1 Megohm R39. 1 Megohm R30. 3 Megohm R31. 1 Megohm R32. 1 Megohm R33. 1 Megohm R34. 1 Megohm R35. 1 Megohm R37. 10,000 ohms R38. 22 Megohm R39. 1 Megohm R39	R2.	·47 Megohm				
R4.       68 ohms       R45.       1 Megohm         R5.       33,000 ohms       1W       R46.       1 Megohm         R6.       1,000 ohms       R47.       47 Megohm         R7.       150 ohms       R48.       680 ohms         R8.       12 ohms       R49.       47,000 ohms         R9.       47 Megohm       R50.       4,700 ohms         R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R54.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R55.       2,200 ohms         R17.       12 ohms       R55.       1,000 ohms         R18.       12 ohms       R59.       10,000 ohms         R19.       1 Megohm       R59.       10,000 ohms         R19.       1 Megohm       R60.       5,000 ohms         R21.       150 ohms       R61.       27,000 ohms         R22.       1,000 ohms       R64.       68,000 ohms         R23.		·47 Megohm				
R5.       33,000 ohms       1W       R46.       1 Megohm         R6.       1,000 ohms       R47.       -47 Megohm         R7.       150 ohms       R48.       680 ohms         R8.       12 ohms       R49.       47.000 ohms         R9.       -47 Megohm       R50.       4,700 ohms         R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R54.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R55.       1,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       -1 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm       Wire Would         R23.       15,000 ohms       R64.       68,000 ohms       Wire Would         R24. <td< td=""><td></td><td></td><td></td><td>R45.</td><td>1 Megohm</td><td></td></td<>				R45.	1 Megohm	
R6.       1,000 ohms       R47.       -47 Megohm         R7.       150 ohms       R48.       680 ohms         R8.       12 ohms       R49.       47.000 ohms         R9.       -47 Megohm       R50.       4,700 ohms         R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       -1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R55.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R55.       2,200 ohms         R17.       12 ohms       R55.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       -1 Megohm       R59.       10,000 ohms         R19.       -1 Megohm       R59.       10,000 ohms         R20.       -47 Megohm       R61.       27,000 ohms       1W         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R64.       68,000 ohms       R65		33,000 ohms	1W	R46.	1 Megohm	
R7.       150 ohms       R48.       680 ohms         R8.       12 ohms       R49.       47.000 ohms         R9.       47 Megohm       R50.       4,700 ohms         R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       -1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R54.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R55.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R57.       1,000 ohms         R19.       1 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       47 Megohm       R61.       27,000 ohms       1W         R23.       15,000 ohms       R63.       22,000 ohms       Potentiometer         R24.       1,000 ohms       R64.       68,000 ohms       Potentiometer         R25.				R47.	·47 Megohm	
R8.       12 ohms       R49.       47,000 ohms         R9.       -47 Megohm       R50.       4,700 ohms         R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       -1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R54.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       -1 Megohm       R60.       5,000 ohms         R20.       -47 Megohm       R60.       5,000 ohms       1W         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R63.       22,000 ohms       Potentiometer         R24.       1,000 ohms       R64.       68,000 ohms       Potentiometer         R25.       33,000 ohms       R66.       2,700 ohms       Wire Wound         R29.		10.45.2.33		R48.	680 ohms	
R9.       -47 Megohm       R50.       4,700 ohms         R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       -1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R55.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R57.       1,000 ohms         R19.       -1 Megohm       R59.       10,000 ohms         R20.       -47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       R01.       1W         R22.       -47 Megohm       R62.       2 Megohm       R02.       2 Megohm       R03.       22,000 ohms       R04.       68,000 ohms       R04.       70 ohms       R04.       70 ohms       R04.       70 ohms       R04. <td< td=""><td></td><td>7524</td><td></td><td>R49.</td><td>47.000 ohms</td><td></td></td<>		7524		R49.	47.000 ohms	
R11.       68 ohms       R51.       1 Megohm         R12.       33,000 ohms       1W       R52.       1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R54.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       1 Megohm       R69.       2000 ohms         R20.       47 Megohm       R60.       5,000 ohms       1W         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R64.       68,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R66.       2,700 ohms       Wire Wound         R29.       820 ohms       R69.       -27 Megohm       R69.       -27 Megohm		·47 Megohm		R50.	4,700 ohms	
R12.       33,000 ohms       1W       R52.       -1 Megohm         R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R55.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       -1 Megohm       R59.       10,000 ohms         R20.       -47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       Potentiometer         R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R64.       68,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Wire Wound         R27.       15,000 ohms       R66.       2,700 ohms       Wire Wound         R28.       -47 Megohm       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms       Potentiometer </td <td></td> <td></td> <td></td> <td>R51.</td> <td>1 Megohm</td> <td></td>				R51.	1 Megohm	
R13.       1,000 ohms       R53.       22,000 ohms         R14.       1,000 ohms       R54.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R59.       10,000 ohms         R19.       1 Megohm       R59.       10,000 ohms         R20.       47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       Potentiometer         R22.       47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Wire Wound         R27.       15,000 ohms       R66.       2,700 ohms       Wire Wound         R28.       47 Megohm       R68.       22,000 ohms       Wire Wound         R29.       820 ohms       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms       Potentiometer			1W	R52.	·1 Megohm	
R14.       1,000 ohms       R54.       2,200 ohms         R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       1 Megohm       R59.       10,000 ohms         R20.       47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       47 Megohm       R62.       2 Megohm         R24.       1,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R68.       22,000 ohms       1W         R28.       47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R70.       5 ohms       Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms				R53.		
R15.       150 ohms       R55.       2,200 ohms         R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       1 Megohm       R59.       10,000 ohms         R20.       47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R64.       68,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R66.       2,700 ohms       Wire Wound         R29.       820 ohms       R68.       22,000 ohms       1W         R30.       3,300 ohms       R70.       5 ohms       Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms       R72.       1 Megohm         R33.       1 Megohm <td></td> <td></td> <td></td> <td>R54.</td> <td>2,200 ohms</td> <td></td>				R54.	2,200 ohms	
R16.       1,000 ohms       R56.       10,000 ohms         R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       -1 Megohm       R59.       10,000 ohms         R20.       -47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms       Wire Wound         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R74.       1 Megohm <td></td> <td></td> <td></td> <td>R55.</td> <td>2,200 ohms</td> <td></td>				R55.	2,200 ohms	
R17.       12 ohms       R57.       1,000 ohms         R18.       12 ohms       R58.       22,000 ohms         R19.       -1 Megohm       R59.       10,000 ohms         R20.       -47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R64.       68,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R66.       2,700 ohms       Wire Wound         R28.       -47 Megohm       R69.       22,000 ohms       1W         R29.       820 ohms       R69.       22,000 ohms       1W         R30.       3,300 ohms       R70.       5 ohms       Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       -1 Megohm         R33.       1 Megohm       R75.				R56.	10,000 ohms	
R18.       12 ohms       R58.       22,000 ohms         R19.       ·1 Megohm       R59.       10,000 ohms         R20.       ·47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       ·47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R65.       10,000 ohms       Potentiometer         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R68.       22,000 ohms       1W         R28.       ·47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       ·27 Megohm         R30.       3,300 ohms       R70.       5 ohms       Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.				R57.	1,000 ohms	
R19.       -1 Megohm       R59.       10,000 ohms       Potentiometer         R20.       -47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R65.       10,000 ohms       Potentiometer         R27.       15,000 ohms       R66.       2,700 ohms       Potentiometer         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm       1W         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms       R72.       -1 Megohm         R33.       1 Megohm       R73.       6,800 ohms       R74.       -1 Megohm         R34.       68 ohms       R74.       -1 Megohm       R75.       47 ohms         R35.				R58.	22,000 ohms	
R20.       -47 Megohm       R60.       5,000 ohms       Potentiometer         R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm       1W         R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms       1W         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm       1W         R30.       3,300 ohms       R70.       5 ohms       Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       1 Megohm       R73.       6,800 ohms         R33.       1 Megohm       R74.       1 Megohm       R75.       47 ohms         R36.       1 Megohm       R76.       3 Megohms       R77.       22,000 ohms <td></td> <td></td> <td></td> <td>R59.</td> <td>10,000 ohms</td> <td></td>				R59.	10,000 ohms	
R21.       150 ohms       R61.       27,000 ohms       1W         R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms       1W         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm       1W         R30.       3,300 ohms       R70.       5 ohms Potentiometer       800 ohms       1         R31.       1,200 ohms       R71.       6,800 ohms       1       1         R32.       68 ohms       R72.       1 Megohm       1				R60.	5,000 ohms	Potentiometer
R22.       -47 Megohm       R62.       2 Megohm         R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       1W       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms       1W         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       -1 Megohm       R73.       6,800 ohms         R33.       1 Megohm       R73.       6,800 ohms       R74.       -1 Megohm         R34.       68 ohms       R74.       -1 Megohm       R75.       47 ohms         R35.       -1 Megohm       R76.       3 Megohms       R77.       22,000 ohms         R37.       10,000 ohms       R78.       -47 Megohm       R78.       -47 Megohm         R39.				R61.	27,000 ohms	1W
R23.       15,000 ohms       R63.       22,000 ohms         R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       1W       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R70.       5 ohms       Potentiometer         R31.       1,200 ohms       R70.       5 ohms       Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       1 Megohm         R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R79.       68 ohms         R40.       -5 Megohm       Potentiometer       R80.       10,000 ohms				R62.		
R24.       1,000 ohms       R64.       68,000 ohms         R25.       33,000 ohms       1W       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       -1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       -1 Megohm         R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R40.       -5 Megohm Potentiometer       R80.       10,000 ohms				R63.		
R25.       33,000 ohms       1W       R65.       10,000 ohms       Potentiometer         R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       -1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       -1 Megohm         R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm       Potentiometer       R80.       10,000 ohms				R64.	68,000 ohms	
R26.       1,000 ohms       R66.       2,700 ohms       Wire Wound         R27.       15,000 ohms       R67.       4,700 ohms         R28.       -47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       -1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       -1 Megohm         R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R78.       -47 Megohm         R38.       -22 Megohm       R79.       68 ohms         R40.       -5 Megohm Potentiometer       R80.       10,000 ohms			1W	R65.	10,000 ohms	Potentiometer
R27.       15,000 ohms       R67.       4,700 ohms         R28.       .47 Megohm       R68.       22,000 ohms       1W         R29.       820 ohms       R69.       .27 Megohm         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       .1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       .1 Megohm         R35.       .1 Megohm       R75.       .47 ohms         R36.       .1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       .22 Megohm       R78.       .47 Megohm         R39.       .1 Megohm       R79.       68 ohms         R40.       .5 Megohm Potentiometer       R80.       10,000 ohms				R66.	2,700 ohms	Wire Wound
R28. 47 Megohm       R68. 22,000 ohms 1W         R29. 820 ohms       R69. 27 Megohm         R30. 3,300 ohms       R70. 5 ohms Potentiometer         R31. 1,200 ohms       R71. 6,800 ohms         R32. 68 ohms       R72. 1 Megohm         R33. 1 Megohm       R73. 6,800 ohms         R34. 68 ohms       R74. 1 Megohm         R35. 1 Megohm       R75. 47 ohms         R36. 1 Megohm       R76. 3 Megohms         R37. 10,000 ohms       R77. 22,000 ohms         R38. 22 Megohm       R78. 47 Megohm         R39. 1 Megohm       R79. 68 ohms         R40. 5 Megohm Potentiometer       R80. 10,000 ohms				R67.	4,700 ohms	
R29.       820 ohms       R69.       -27 Megohm         R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       -1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       -1 Megohm         R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm Potentiometer       R80.       10,000 ohms				R68.	22,000 ohms	1W
R30.       3,300 ohms       R70.       5 ohms Potentiometer         R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       1 Megohm         R35.       1 Megohm       R75.       47 ohms         R36.       1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       1 Megohm       R79.       68 ohms         R40.       -5 Megohm Potentiometer       R80.       10,000 ohms						
R31.       1,200 ohms       R71.       6,800 ohms         R32.       68 ohms       R72.       1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       1 Megohm         R35.       1 Megohm       R75.       47 ohms         R36.       1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm       Potentiometer       R80.       10,000 ohms				R70.		entiometer
R32.       68 ohms       R72.       -1 Megohm         R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       -1 Megohm         R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm       Potentiometer       R80.       10,000 ohms				R71.	6,800 ohms	
R33.       1 Megohm       R73.       6,800 ohms         R34.       68 ohms       R74.       1 Megohm         R35.       1 Megohm       R75.       47 ohms         R36.       1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm       Potentiometer       R80.       10,000 ohms		V-7553 A4				
R34.       68 ohms       R74.       -1 Megohm         R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm Potentiometer       R80.       10,000 ohms						
R35.       -1 Megohm       R75.       47 ohms         R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm Potentiometer       R80.       10,000 ohms						
R36.       -1 Megohm       R76.       3 Megohms         R37.       10,000 ohms       R77.       22,000 ohms         R38.       -22 Megohm       R78.       -47 Megohm         R39.       -1 Megohm       R79.       68 ohms         R40.       -5 Megohm Potentiometer       R80.       10,000 ohms					47 ohms	
R37. 10,000 ohms R3822 Megohm R391 Megohm R405 Megohm Potentiometer R37. 22,000 ohms R7847 Megohm R79. 68 ohms R80. 10,000 ohms						
R3822 Megohm       R7847 Megohm         R391 Megohm       R79. 68 ohms         R405 Megohm Potentiometer       R80. 10,000 ohms					22,000 ohms	
R391 Megohm R79. 68 ohms R405 Megohm Potentiometer R80. 10,000 ohms						
R40. · 5 Megohm Potentiometer R80. 10,000 ohms					68 ohms	
7.10.			Potentiometer			
			. Catallata Macal			

C1. C2. C3. C4. C5. C6. C7. C8. C9. C11. C12. C13. C15. C16. C17. C18. C19. C20. C21. C22. C24. C25. C27. C29. C31. C32. C33. C34. C35. C36. C37. C38. C37. C38. C37. C38. C37. C38. C37. C40. C41. C42. C45. C55. C56. C57. C56. C57. C56. C57. C56. C57. C56. C57. C56. C57. C58. C59. C60. C60. C60. C60. C60. C60. C60. C60	3-23 pF Air Trimmer 10 pF Silvered Mica 3-23 pF Air Trimmer 100 pF Silvered Mica 0005 mfd Moulded Mica 10-367·75 pF 1st R.F. Sect. 4 Gang 25 pF Silvered Mica 01 mfd Tub. paper 01 mfd Tub. paper 01 mfd Tub. paper 1005 mfd Moulded Mica 1 mfd Tub. paper 20 pF Silvered Mica 3-23 pF Air Trimmer 6 pF Silvered Mica 3-23 pF Air Trimmer 3 pF Silvered Mica 3-23 pF Air Trimmer 3 pF Silvered Mica 3-23 pF Air Trimmer 3 pF Silvered Mica 3-23 pF Air Trimmer 10-367·75 pF 2nd. R.F. Sect. 4 Gang 25 pF Silvered Mica 1 mfd Tub. paper 100 pF Silvered Mica 1 mfd Tub. paper 20 pF Silvered Mica 2-23 pF Air Trimmer 3-23 pF Air Trimmer 3-23 pF Air Trimmer 3-23 pF Air Trimmer 3-24 pF Silvered Mica 1 mfd Tub. paper 20 pF Silvered Mica 3-23 pF Air Trimmer 3 pF Silvered Mica 3-25 pF Silvered Mica 3-27 pF Air Trimmer 4 mfd Tub. paper 10 mfd Tub. paper	C101. C102. C103. C104. C105. C106. C107. C108. C109. C111. C112. C113. C114. C115. C116. C117. C118. C119. C120.	3-23 pF Air Trimmer 200 pF Ceramic 10-367·75 pF Osc. Sect. 4 Gang 12 pF Ceramic ·1 mfd Tub. paper ·0005 mfd Moulded Mica ·0005 mfd Moulded Mica 50 pF Ceramic ·002 mfd Moulded Mica ·01 mfd Moulded Mica ·01 mfd Moulded Mica 8 pF Silvered Mica 100 pF Silvered Mica 100 pF Silvered Mica B.F.O. Pitch Cond. 100 pF Silvered Mica ·5 mfd Tub. paper ·5 mfd Tub. paper ·01 mfd Tub. paper 16 mfd Tub. Elect. 450V. D.C. Wkg. ·01 mfd Tub. paper ·01 mfd Tub. paper ·01 mfd Tub. paper
C58.	·01 mfd Moulded Mica	C119.	·01 mfd Tub. paper
C60.	500 pF Silvered Mica $\pm$ 2%	C121.	6pF Ceramic
C61.	·1 mfd Tub. paper ·1 mfd Tub. paper		·04 mfd Tub. paper ·01 mfd Tub. paper
C63.	400 pF Silvered Mica ± 2%	C124.	·01 mfd Tub. paper
		C125.	·01 m.d lub. paper

### PERFORMANCE FIGURES

## SENSITIVITY

For signal-to-noise ratio of 15 db, output power 50 milliwatts:

better than 5uV A.M. signal, modulated 30% at 400 cycles ... C.W. signal, ranges 1, 2, 3, 4 .. .. better than 1uV C.W. signal, range 5 .. .. better than 2uV

## AUDIO OUTPUT AND HARMONIC DISTORTION.

At 1,000 cycles, output impedance 2.5 ohms

cycles, output imped	Typical	Production
	performance	limit
1 watt	18%	20%
500 millwatts	6.2%	7%
100 milliwatts	2.5%	3%

## AUTOMATIC GAIN CONTROL.

Typical performance figures taken at 8 Mc/s.: Zero Change Change Selectivity level position of input of output 1 uV 6db Narrow 100db 3 uV 100db 8db Inter 1 3 uV 12db Inter 2 100db 3 uV 11db Wide 100db Figures taken at 750 kc/s. 1 uV 7db 100db Narrow 3 uV 8db Inter 1 100db 3 uV 100db 10db Inter 2 3 uV 10db 100db Wide

Production limits: - at any frequency and any bandwidth, a 100db change of input will not change the output power by more than 14db (zero level 3 uV).

OSCILLATOR STABILITY (Production limits)

BFO note stability with AGC — for an input change of 60db from a level of 10db above 1 uV, the beat note does not change by more than 50 cycles.

BFO thermal stability — after a 30 minute warming-up period, the total drift in one hour does not exceed 225 parts in one million.

BFO voltage co-efficient — for a  $\pm$  10% change in supply voltage, the frequency of the BFO does not change by more than ± 80 cycles (equal to 3.4 cycles per volt).

Local oscillator thermal stability - after two hours warm-up, the total drift does not exceed 150 parts in one million over a period of one hour, under steady ambient temperature conditions and with stable mains supply.

Local oscillator voltage co-efficient — for a  $\pm$  10% change in supply voltage, the frequency of the local oscillator does not change by more than the following :-

at 2.4 Mc/s. ..  $\pm$  200 cycles (4.2 cycles per volt) .. ± 2 kilocycles (86 cycles per volt). at 20 Mc/s.

NOISE FACTOR.

750 kc/s. 2 Mc/s.	12db ) 5db )	frequencies not normally reliable.
4 Mc/s. 9 Mc/s. 20 Mc/s.	10·5db 6·5db 9·5db	± 3db

## CATHODE FOLLOWER.

Output approximately 300 millivolts.. Output impedance approximately 68 ohms.



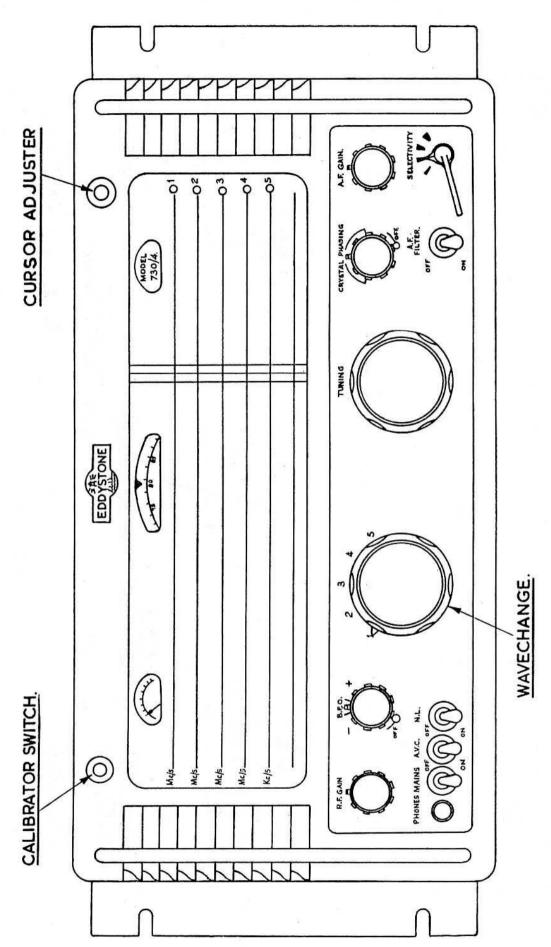


Fig. 1. Front view, in outline, of the "730/4" Receiver

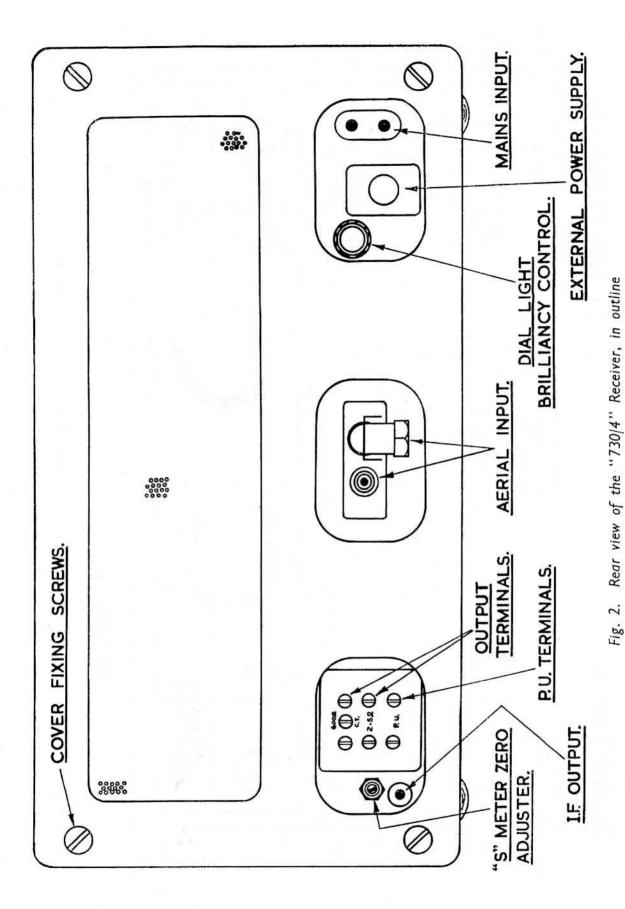

**—10 —** 

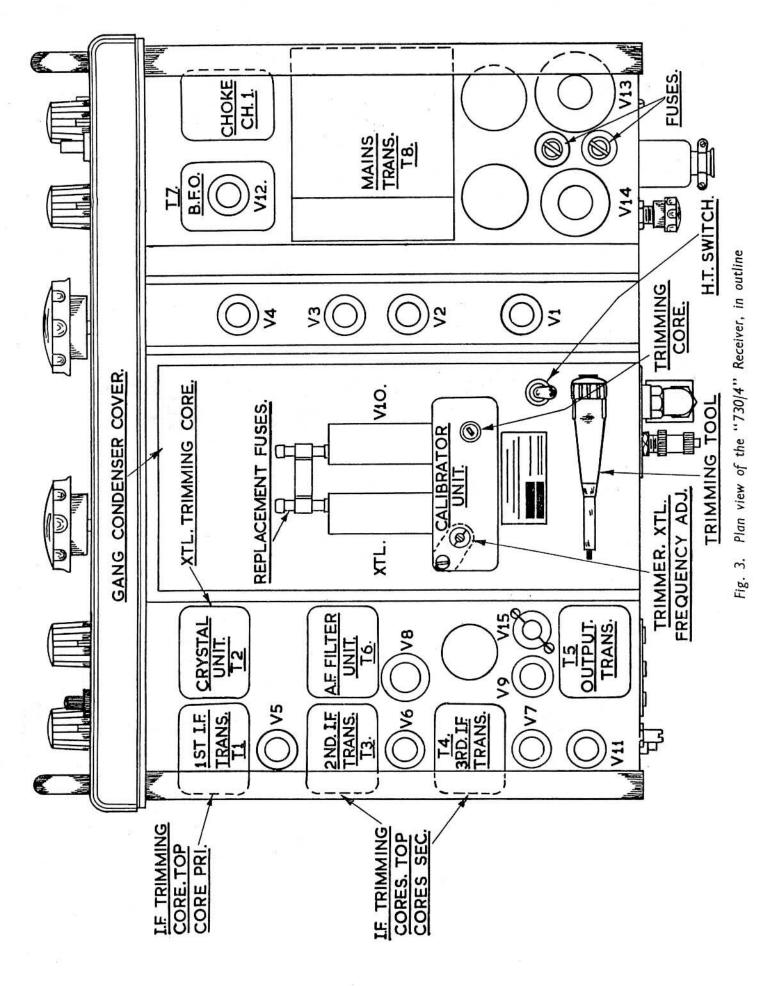

**— 11** —




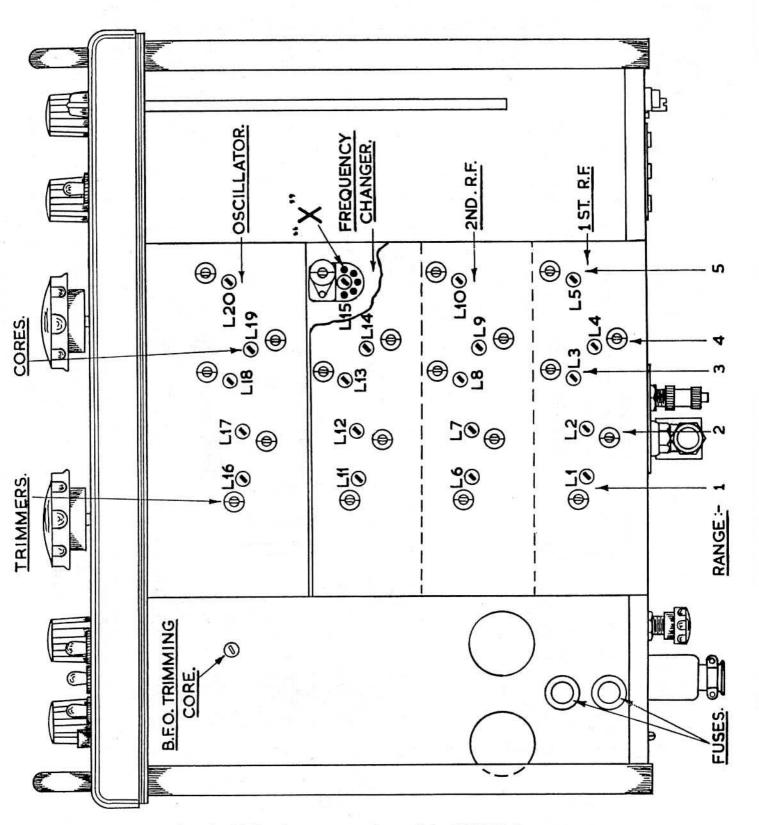


Fig. 4. Underside view, in outline, of the "730/4" Receiver

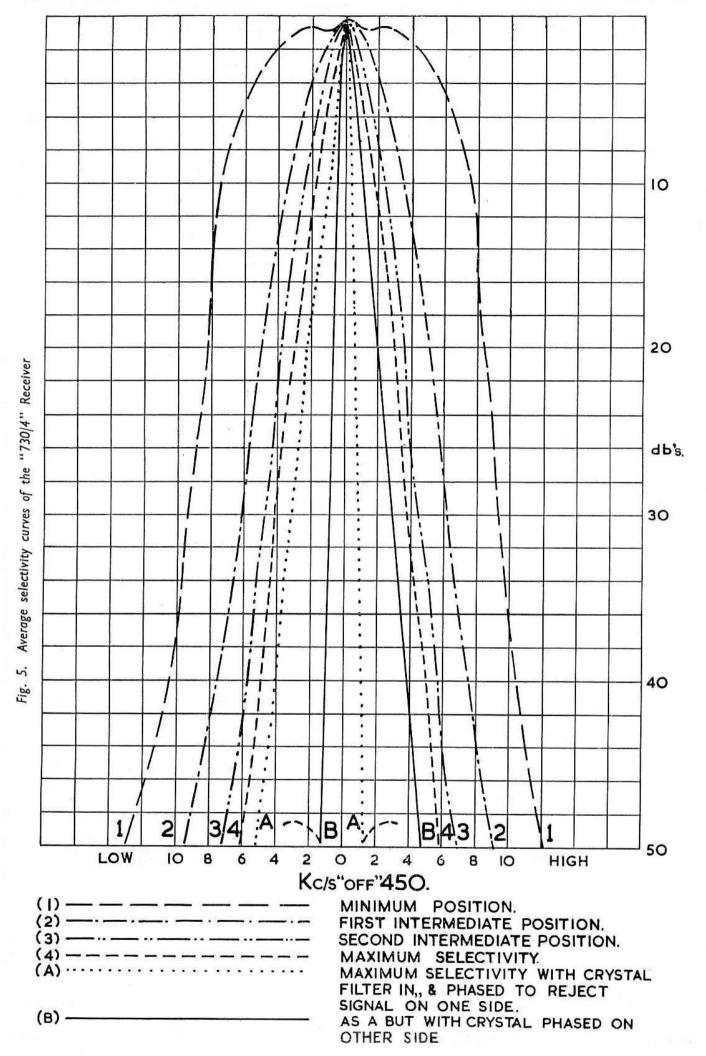


## A.F. FILTER UNIT. RESPONSE CURVE.

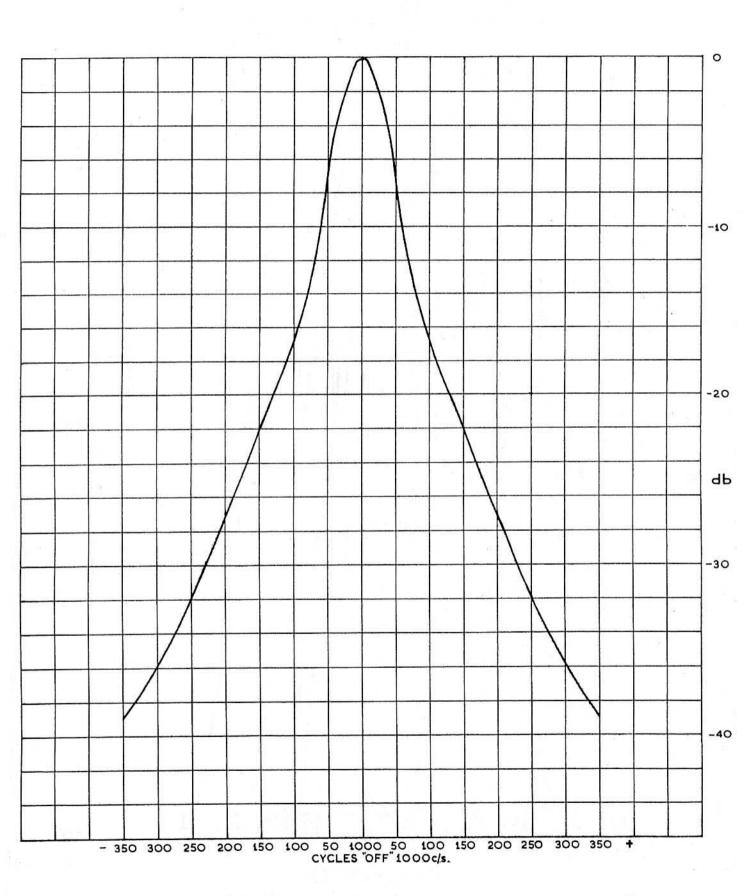

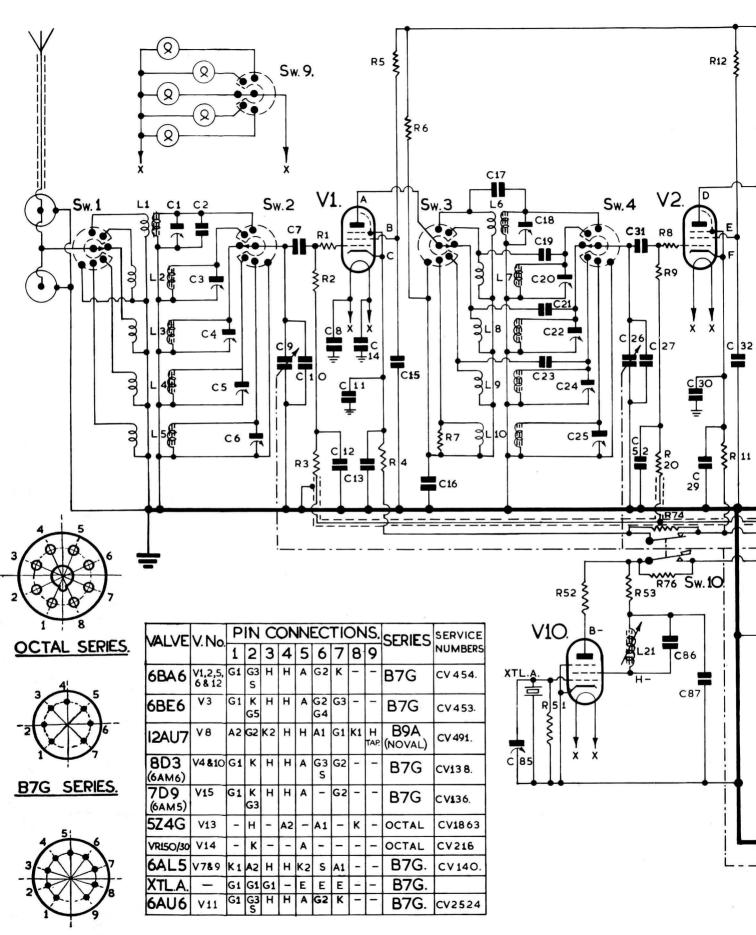



(NOVAL.) B9A SERIES.

**COMMUNICATIO** 

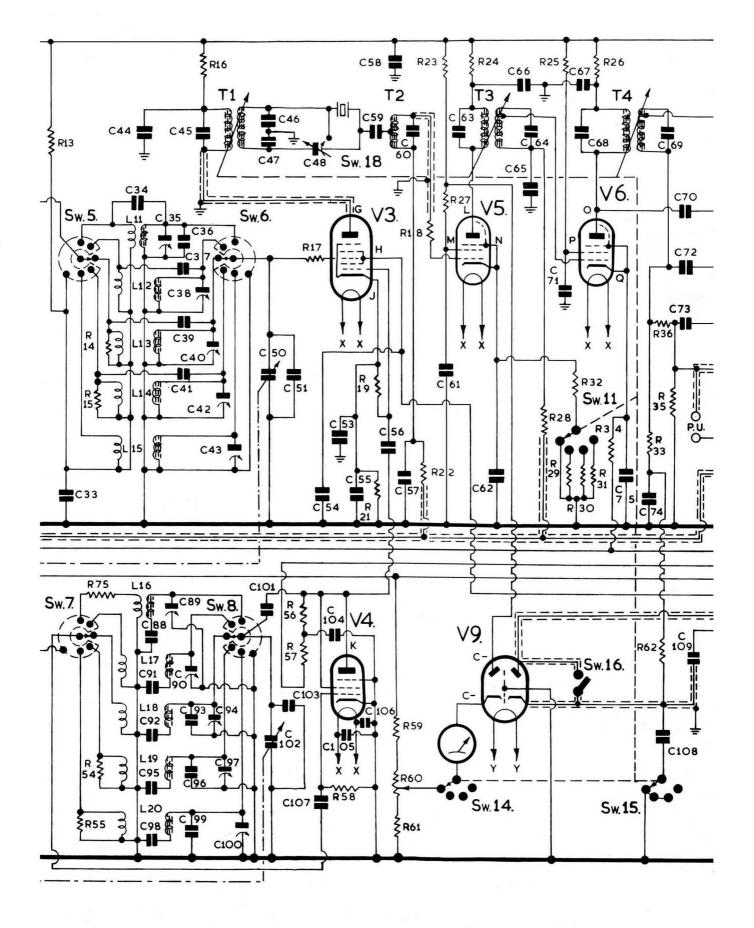

# NS RECEIVER TYPE 730/4.

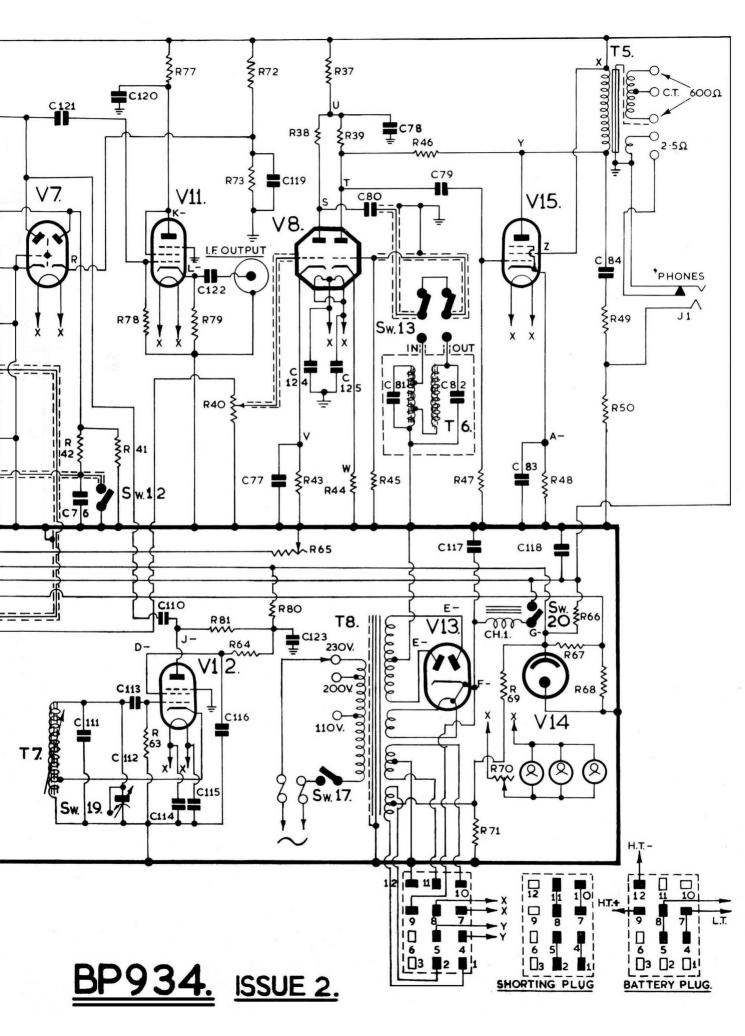

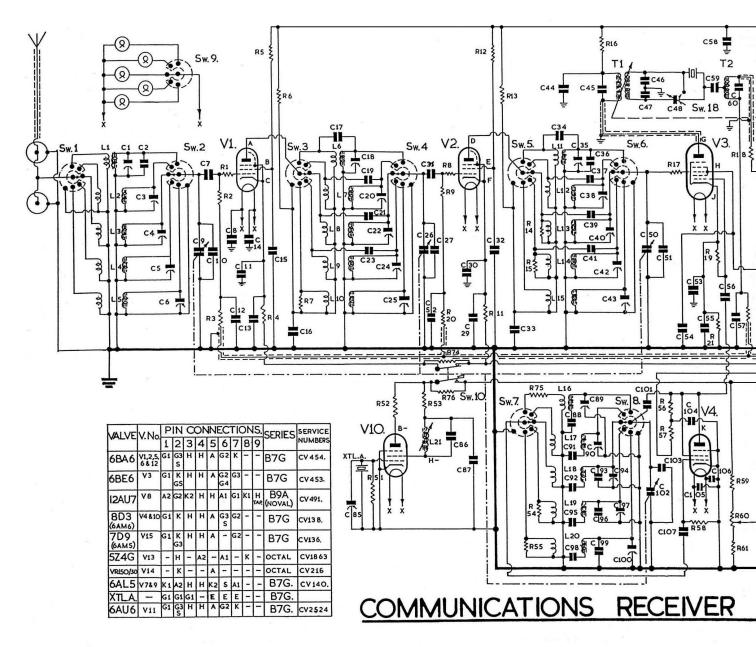

R1.	12 ohms		R42.	-47 Megohm	C1.	3-23 pF Air Trimmer
R2.	-47 Megohm		R43.	6,800 ohms	C2.	10 pF Silvered Mica
R3.	·47 Mcgohm		R44.	2,200 ohms	C3.	3-23 pF Air Trimmer
R4.	68 ohms		R45.	1 Megohm	C4.	3-23 pF Air Trimmer
R5.	33,000 ohms	1W	R46.	1 Megohm	C5.	3-23 pF Air Trimmer
R6.	1,000 ohms		R47.	-47 Megohm	C6.	3-23 pF Air Trimmer
R7.	150 ohms		R48.	680 ohms	C7.	100 pF Silvered Mica
R8.	12 ohms		R49.	47,000 ohms	C8.	·0005 mfd Moulded Mica
R9.	-47 Megohm		R50.	4,700 ohms	C9.	10-367-75 pF 1st R.F. Sect. 4 Gang
R11.	68 ohms		R51.	1 Megohm	C10.	25 pF Silvered Mica
R12.	33,000 ohms	1W	R52.	-1 Megohm	C11.	
R13.	1,000 ohms		R53.	22,000 ohms	C12.	-01 mfd Tub. paper
R14.	1,000 ohms		R54.	2,200 ohms	C13.	
R15.	150 ohms		R55.	2.200 ohms	C14.	
R16.	1,000 ohms		R56.	10,000 ohms		
R17.	12 ohms		R57.	1.000 ohms	C15.	
R18.	12 ohms		R58.	22,000 ohms	C16.	1 mfd Tub. paper
R19.	·1 Megohm		R59.	10,000 ohms	C17.	
R20.	·47 Megohm		R60.	5,000 ohms Potentiometer	C18.	
R21.	150 ohms		R61.	27,000 ohms 1W		6 pF Silvered Mica
R22.	-47 Megohm		R62.	2 Megohm	C20.	
R23.	15,000 ohms		R63.	22,000 ohms	C21.	3 pF Silvered Mica
R24.	1,000 ohms		R64.	68,000 ohms	C22.	3-23 pF Air Trimmer
		114/	R65.	10,000 ohms Potentiometer	C23.	
R25.	33,000 ohms	144	R66.	2.700 ohms Wire Wound		3-23 pF Air Trimmer
R26.	1,000 ohms		R67.	4.700 ohms	C25.	
R27.	15,000 ohms		R68.	22,000 ohms 1W	C26.	10-367-75 pF 2nd. R.F. Sect. 4 Gang
R28.	·47 Megohm		R69.	•27 Megohm	C27.	25 pF Silvered Mica
R29.	820 ohms		R70.	5 ohms Potentiometer	C29.	-1 mfd Tub. paper
R30.	3,300 ohms		R71.	6,800 ohms	C30:	-01 mfd Tub. paper
R31.	1,200 ohms		R72.	-1 Megohm	C31.	100 pF Silvered Mica
R32.	68 ohms		R73.		C32.	·1 mfd Tub. paper
R33.	1 Megohm			6,800 ohms	C33.	·1 mfd Tub. paper
R34.	68 ohms		R74.	·1 Megohm	C34.	20 pF Silvered Mica
R35.	·1 Megohm		R75.	47 ohms		3-23 pF Air Trimmer
R36.	-1 Megohm		R76.	3 Megohms	C36.	20 pF Silvered Mica
R37.	10,000 ohms		R77.	22,000 ohms	C37.	6 pF Silvered Mica
R38.	·22 Megohm		R78.	-47 Megohm	C38.	3-23 pF Air Trimmer
R39.	-1 Megohm		R79.	68 ohms	C39.	3 pF Silvered Mica
R40.	·5 Megohm P	Potentlometer	R80.	10,000 ohms	C40.	3–23 pF Air Trimmer
R41.	1 Megohm		R81.	68,000 ohms	C41.	3 pF Silvered Mica
	=				<b>U</b> 111.	- F

